


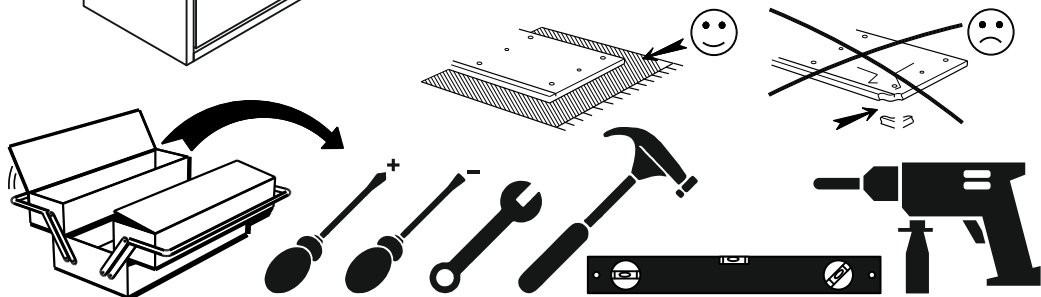


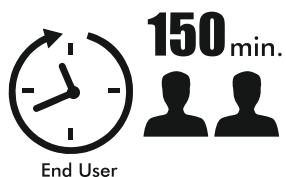

MULTIMO



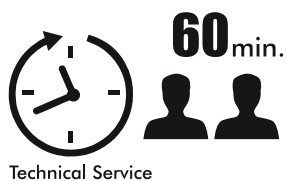


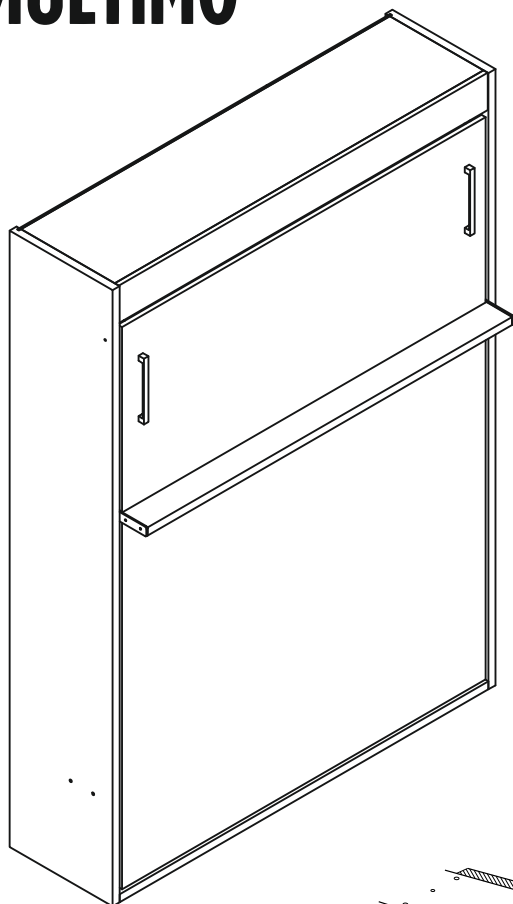














A 226 BELLEZA FULL SIZE





Assembly Instructions


Track Title	Piece	(inch)			Piece	(mm)		
		Thickness	Length	Width		Thick	Height	Most
A	2	1,18	89,76	17,32	2	30	2280	440
B	1	1,18	57,87	17,32	1	30	1470	440
C	2	0,71	57,87	15,75	2	18	1470	400
D	1	0,71	57,87	5,43	1	18	1470	138
E	1	0,71	57,87	10,24	1	18	1470	260
F	1	1,18	57,17	4,33	1	30	1452	110
G	1	1,97	57,64	19,69	1	50	1464	500
H	1	0,71	81,89	57,01	1	18	2080	1448
L	3	0,31	88,94	19,45	3	8	2259	494

Accessories List


MNX 02  24/ piece IM - 01 (6x30) mm  4 / piece DD - 01 (R10)  3 / piece VTB - 01 (4,8x16) mm  12 / piece KVL 01  25 / piece	MNG - 01  24 / piece AL - 01  4 VD - 01(6X70) mm  3 / piece KP - 01 (224) mm  2 / piece MKZ - 02  2 / piece 1400N	OT-054  2 / piece AL - 02  5 PL - 01 (6x19x2) mm  3 / piece VKP - 01 (22) mm  4 / piece TTC 01  4 / piece	CT - 01 (6x40) mm  2 / piece DSE - 01 (40x90x32) mm  3 / piece VDA - 01 (6,5x50) mm  4 / piece VD - 02 (3,5x25) mm  26 / piece TAP - 01  24 / piece
---	---	--	---

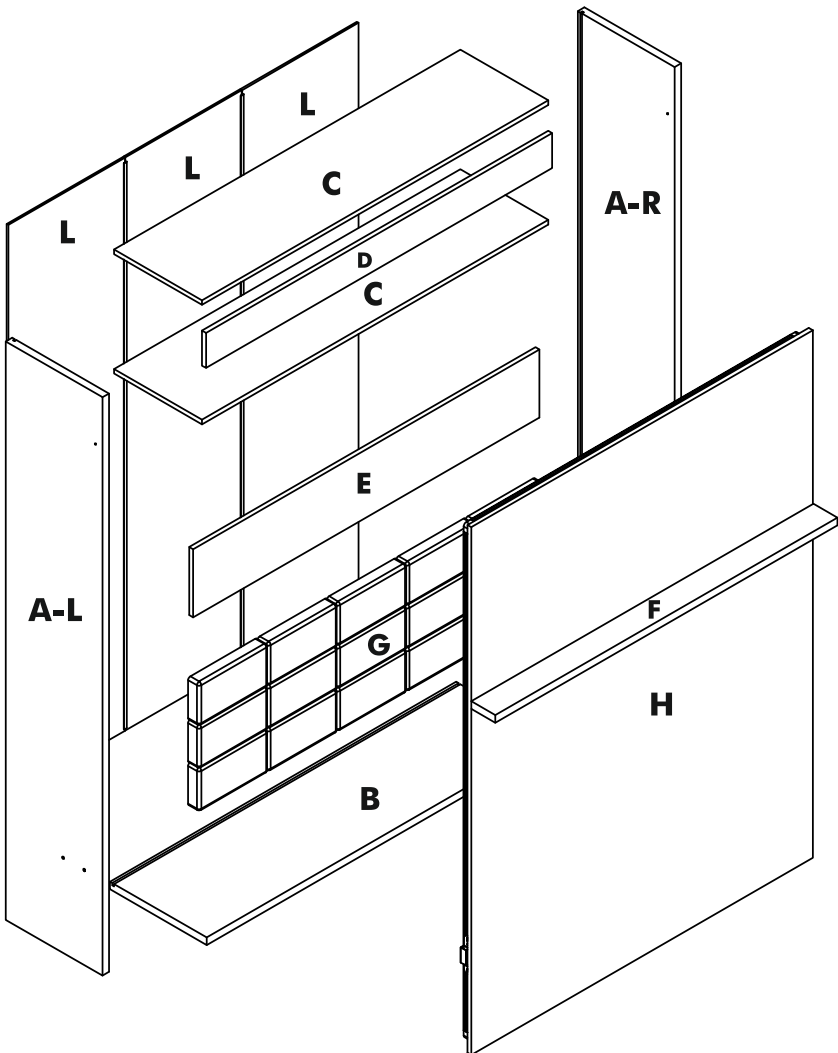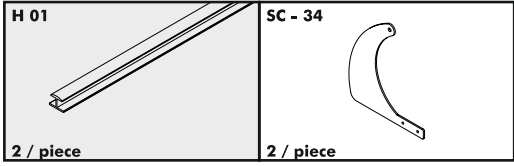

STEP 1

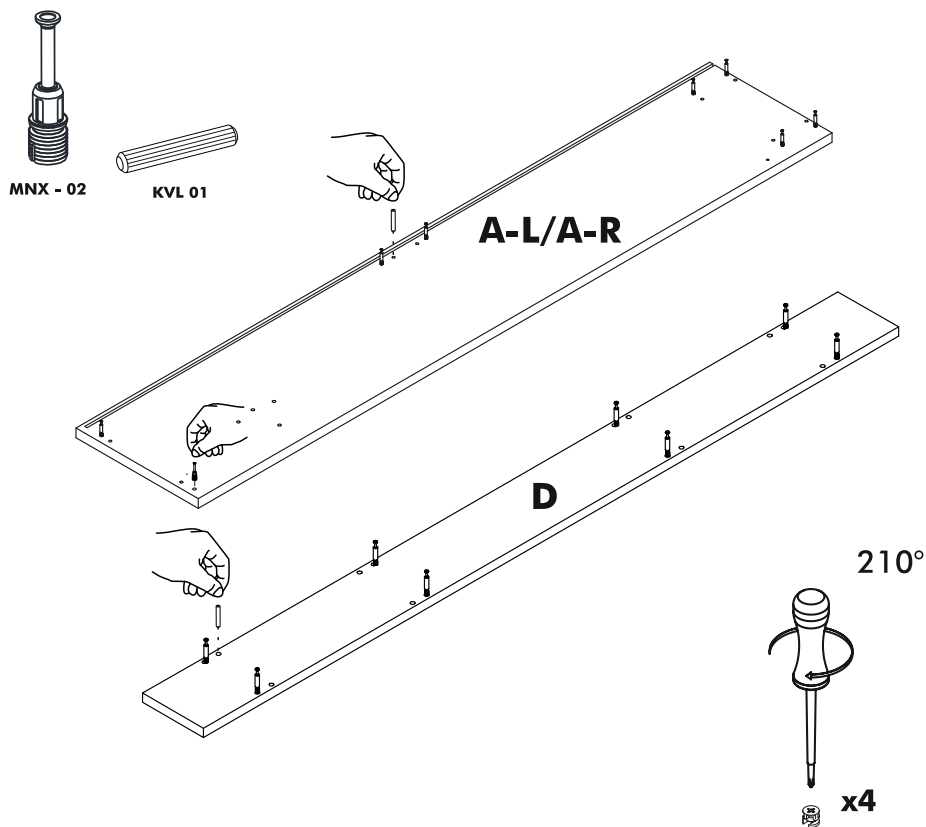


STEP 2

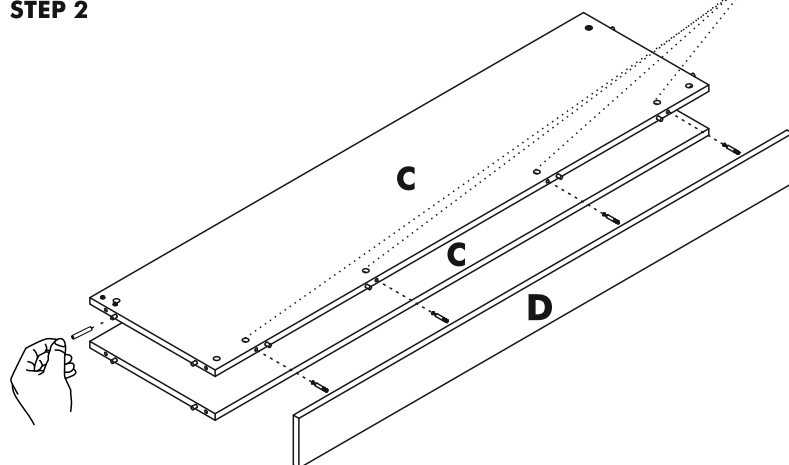


210°




STEP 3

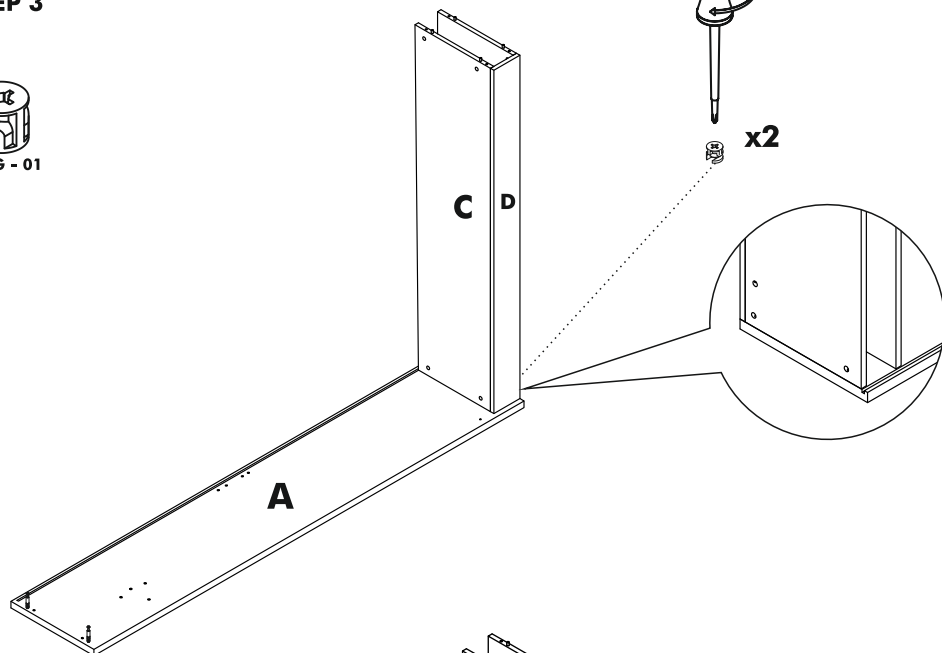


STEP 4

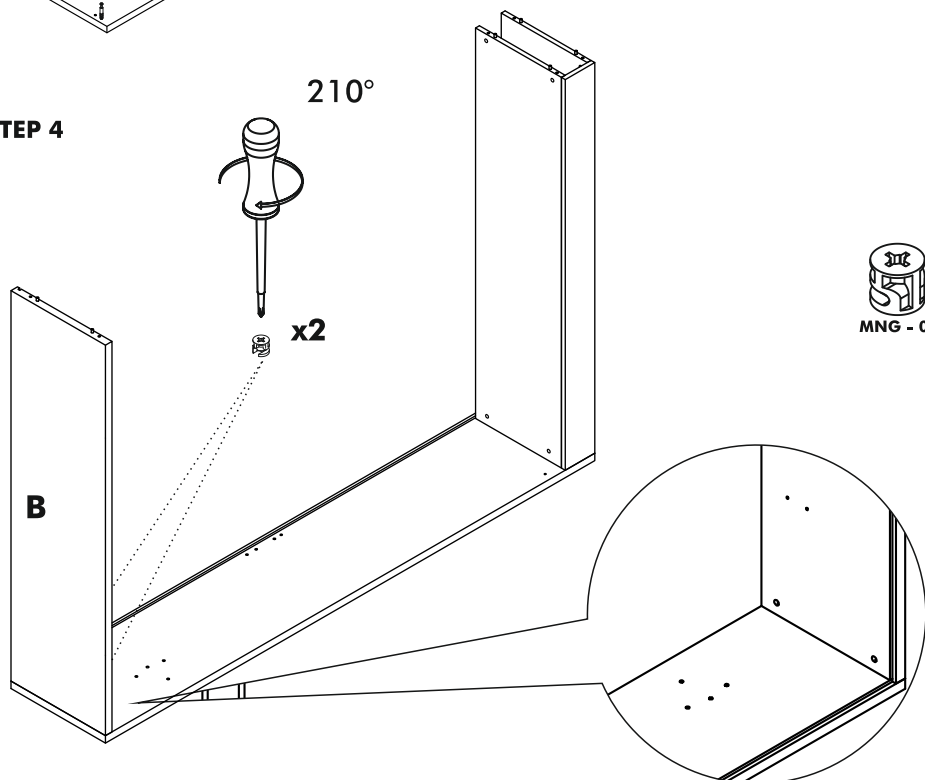


STEP 5

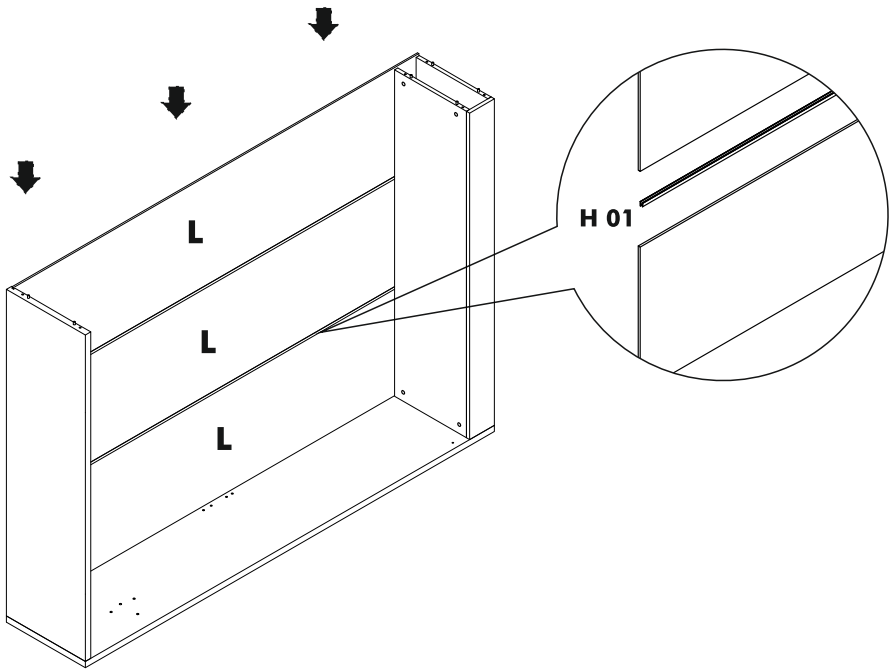


STEP 6

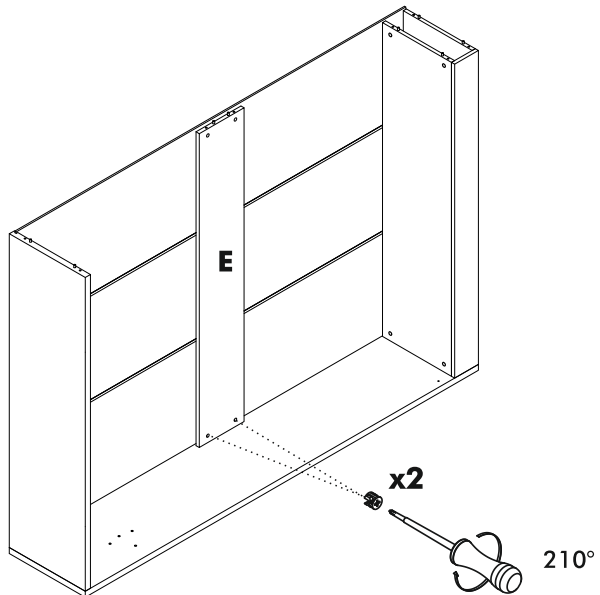


STEP 7

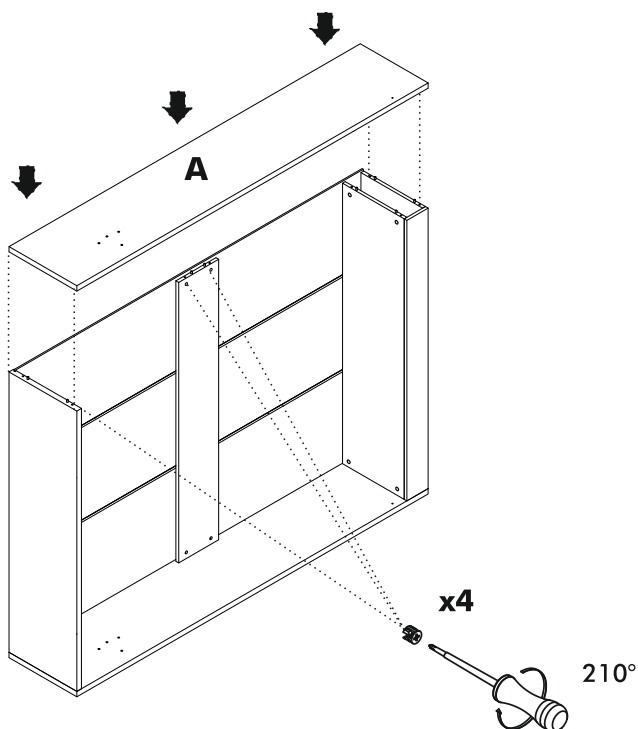

STEP 8

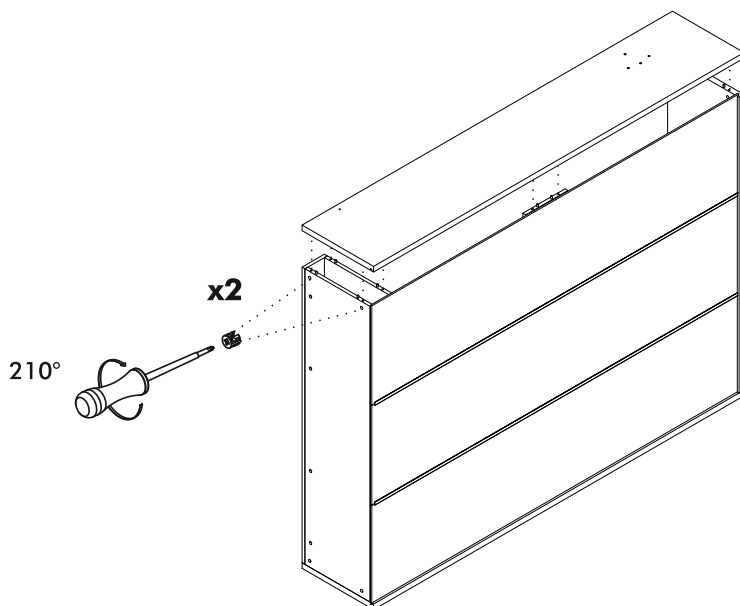

STEP 9

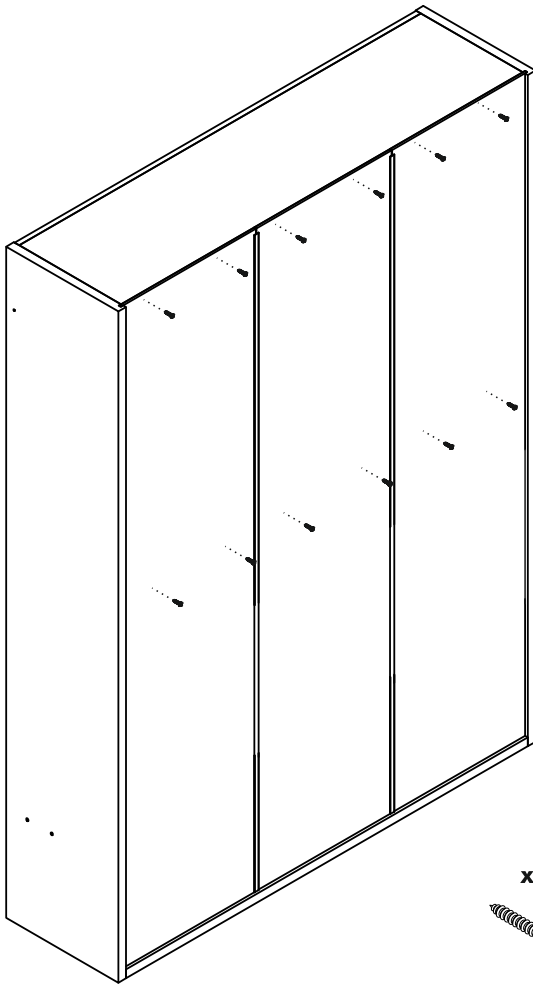


x20




VD - 02



STEP 10

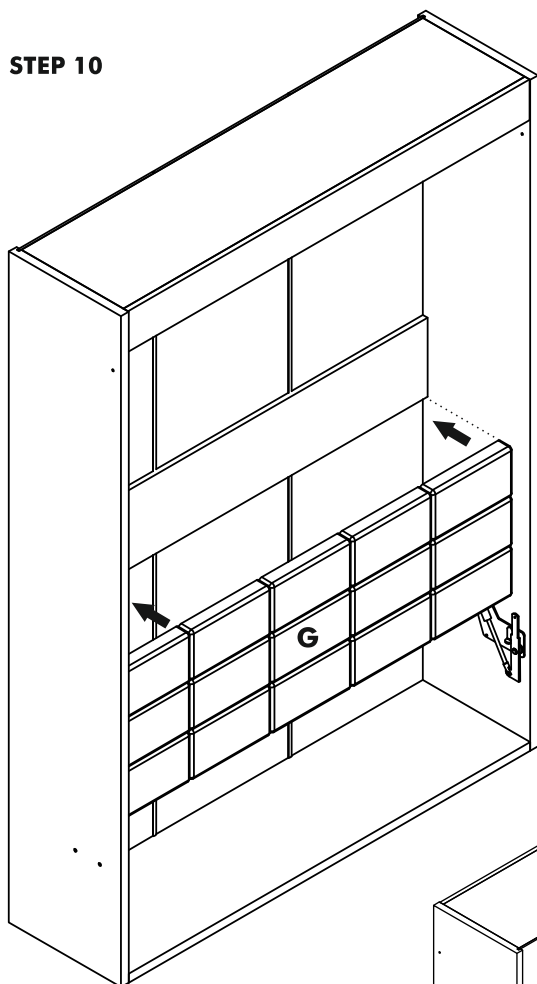

STEP 11

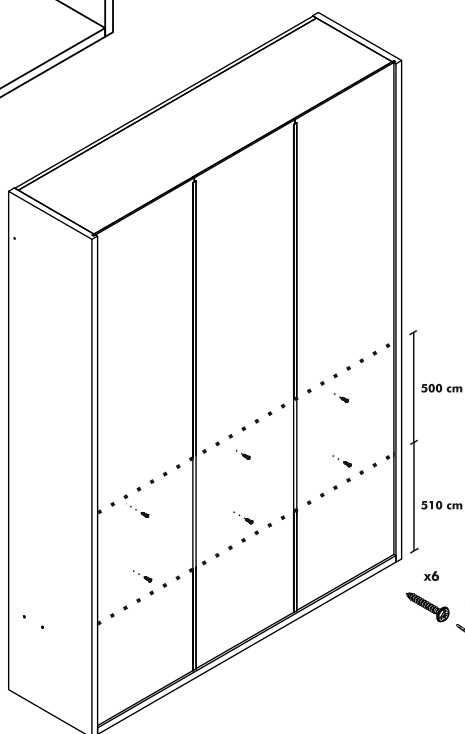




x6





VD - 02



STEP 12

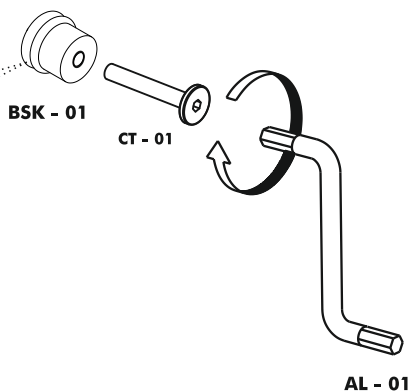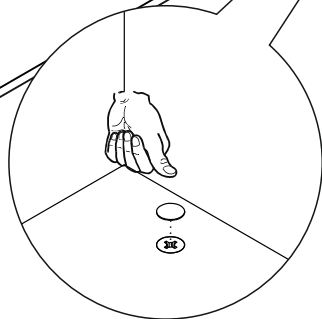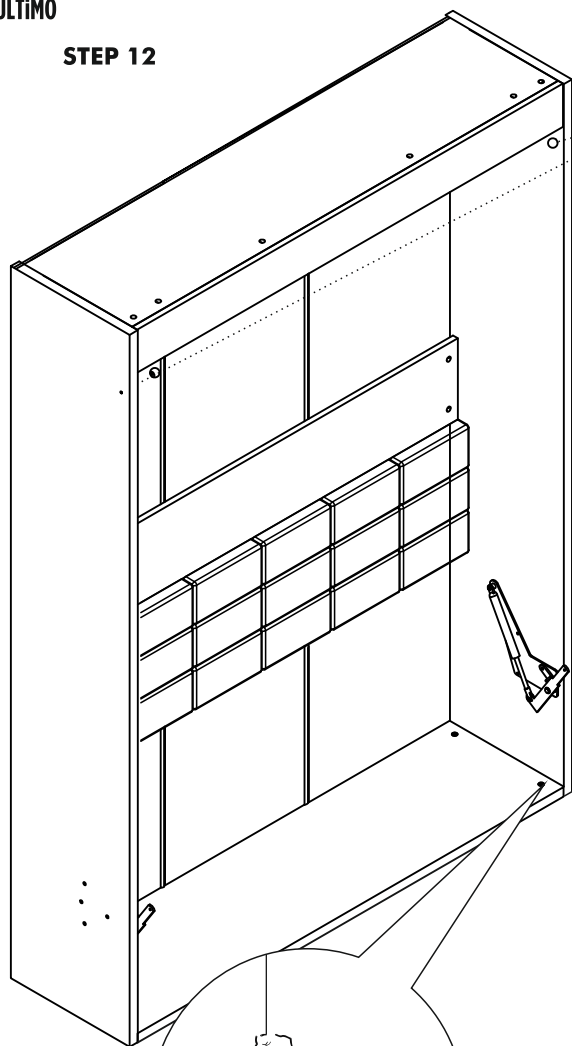

CAUTION
DO NOT UNLOCK BEFORE INSTALL

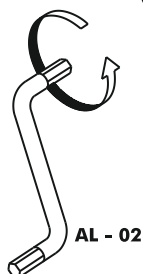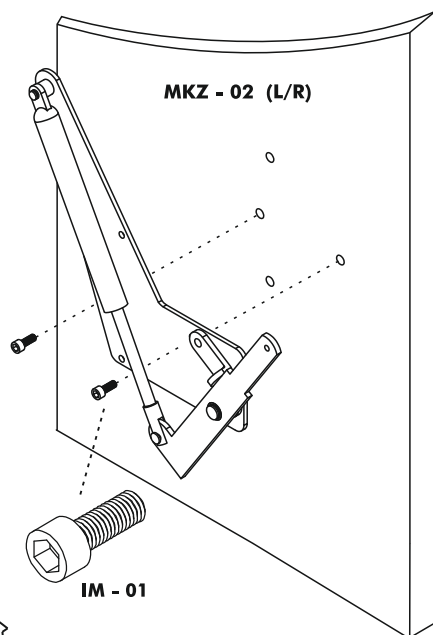

STEP 13



Ø 10 mm / 0,254 inch


DD - 01

PL - 01

VD - 01



VTB - 01

DSE - 01

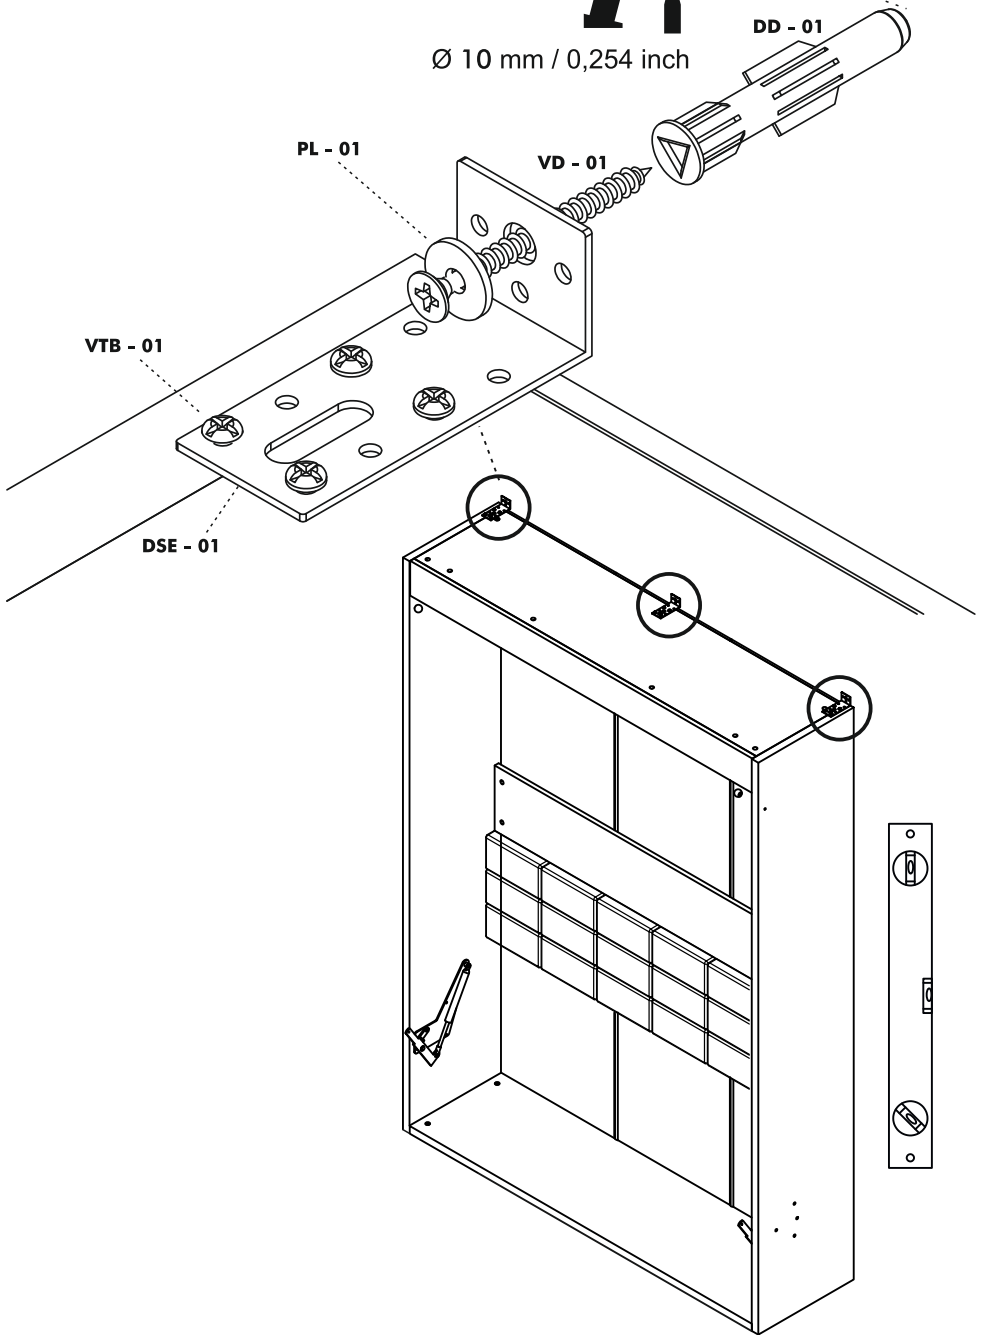

STEP 13-2




Ø 10 mm / 0,254 inc

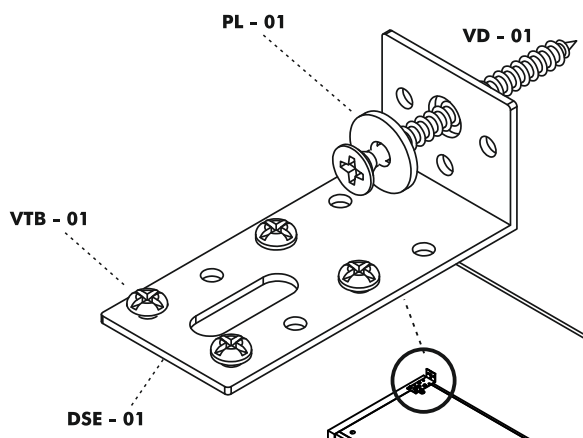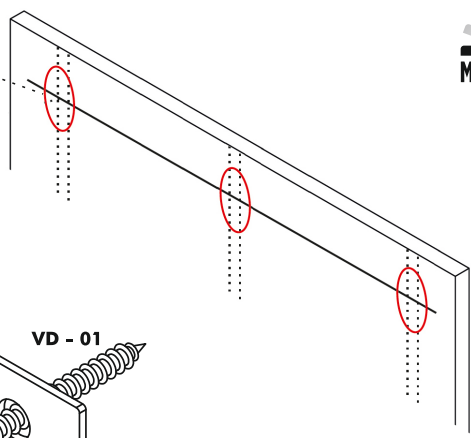

FIRST LOCATE THE STUDS BY USING "STUD FINDER" IN THE WALL AND DRILL IT ACCORDING TO THE HEIGHT MEASUREMENTS GIVEN ON THE SIDE.

UPPER HOLES SHOULD BE DRILLED FOR ATTACHING BED AT NEXT STEP.

SUPPLY DRYWALL FASTENERS APPROPRIATE TO YOUR WALL TYPE. WE RECOMMEND USING STEEL TOGGLE BOLT ANCHOR THAT SHOWN BELOW


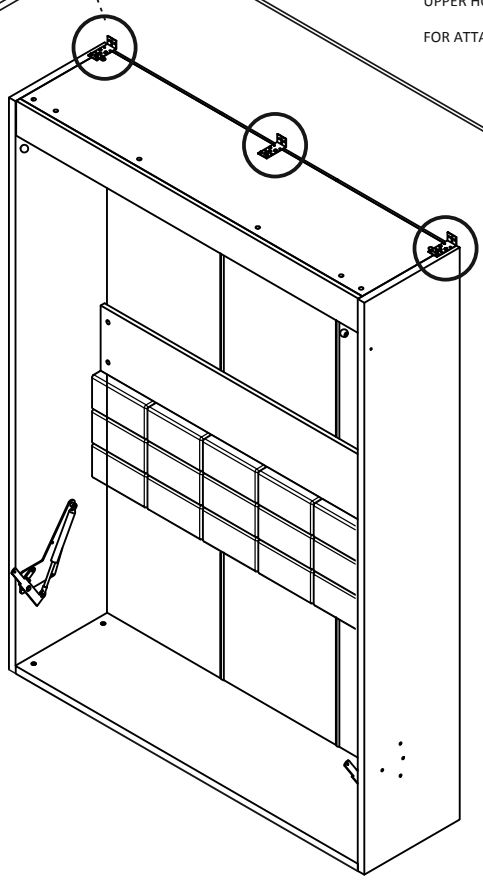
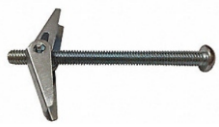


STEP 14



CAUTION

MAKE SURE THE FRONT PANEL IS ALL THE WAY INSIDE THE TONNELS


45-50°

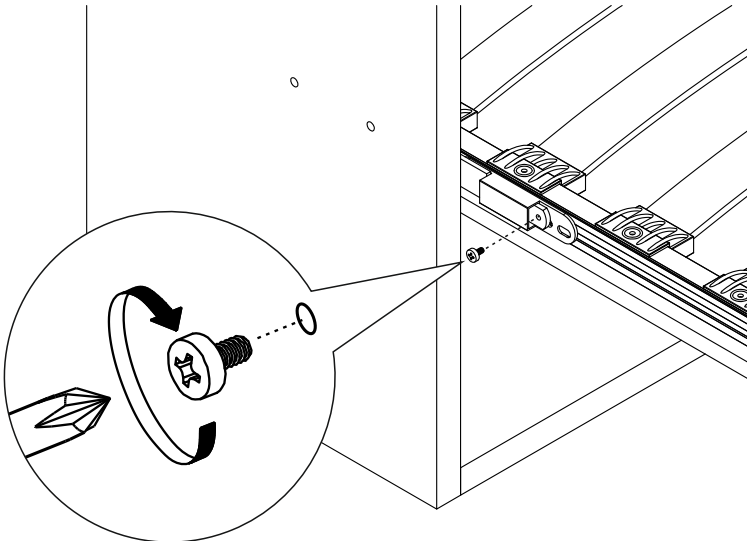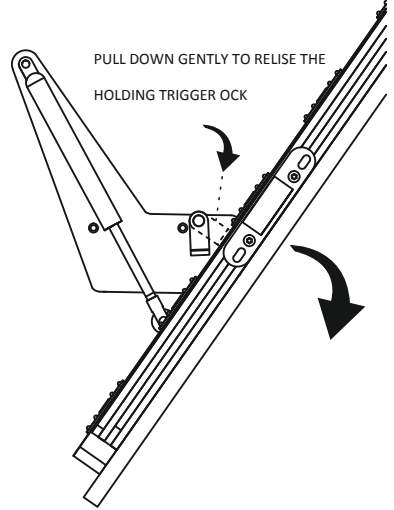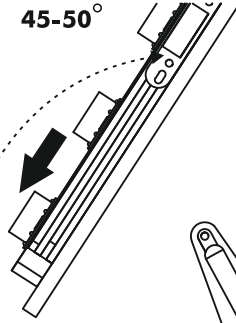


STEP 15

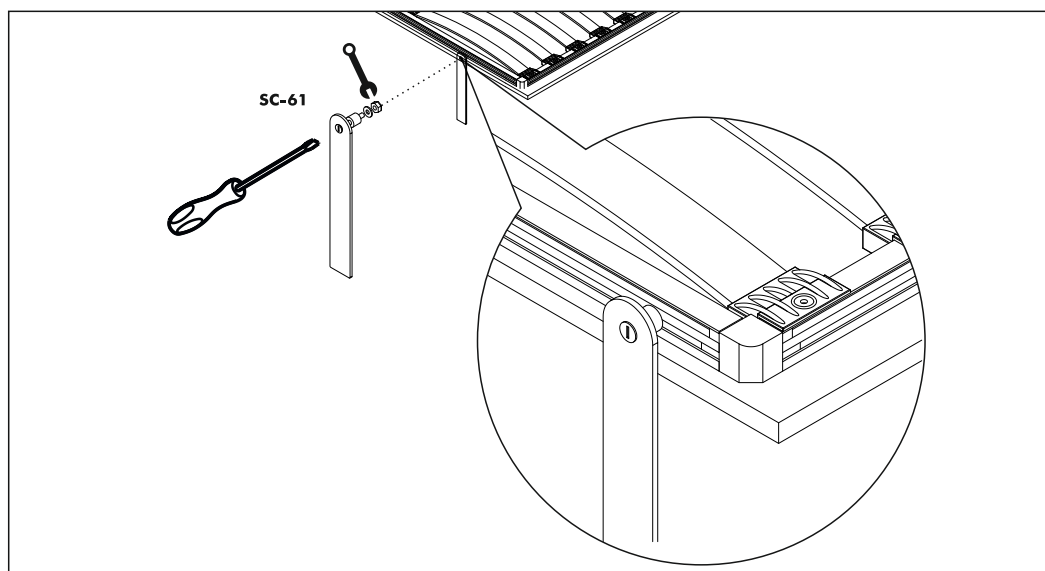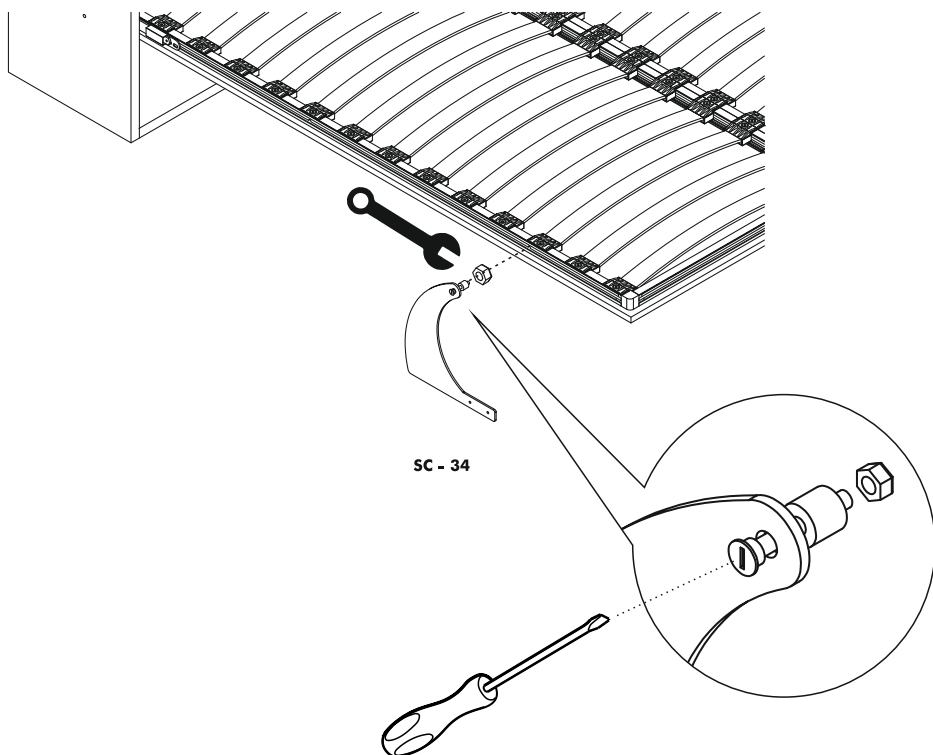


STEP 16

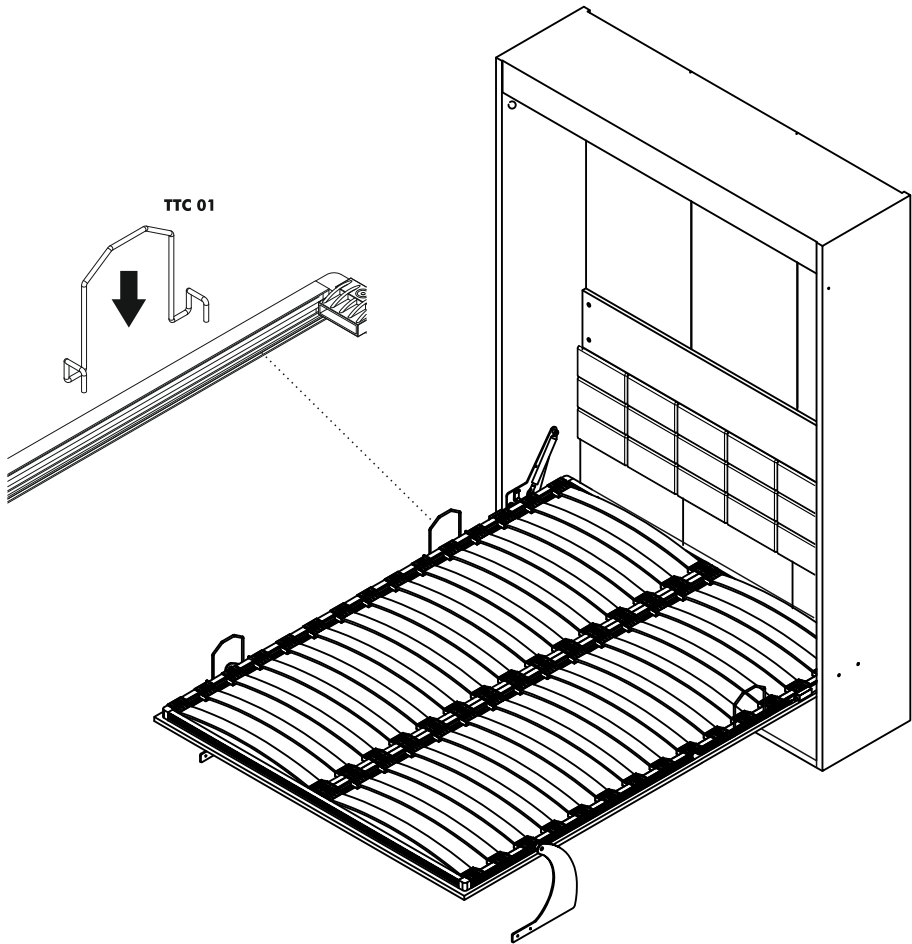

STEP 17




VKP - 01

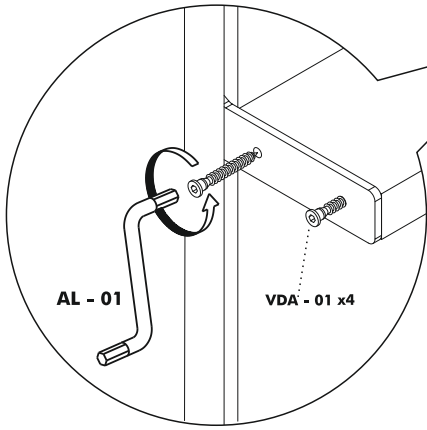


AL - 01

VDA - 01 x4

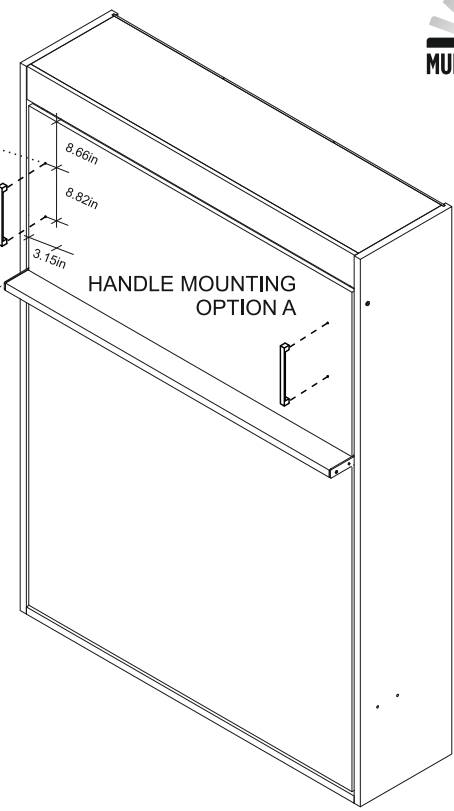


HANDLE MOUNTING
OPTION A


HANDLE MOUNTING
OPTION B

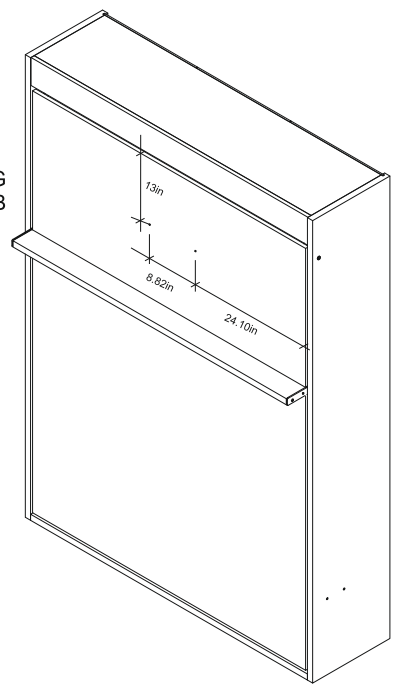

STANDARD FOOT VIEW

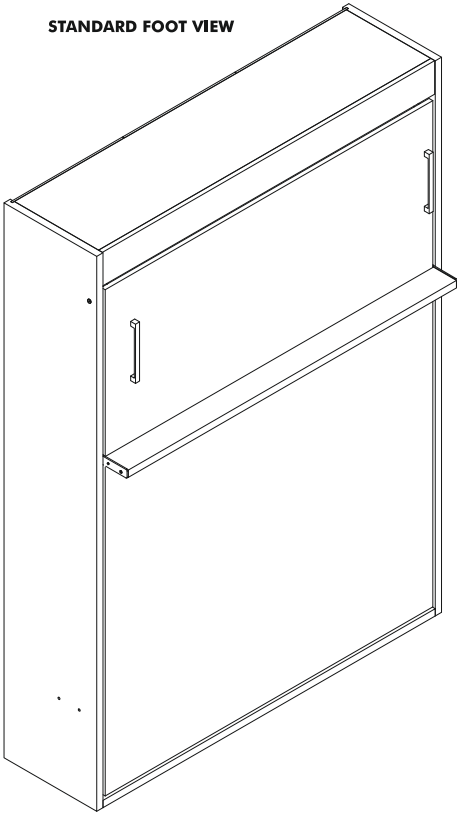

OPTIONAL FOOT VIEW

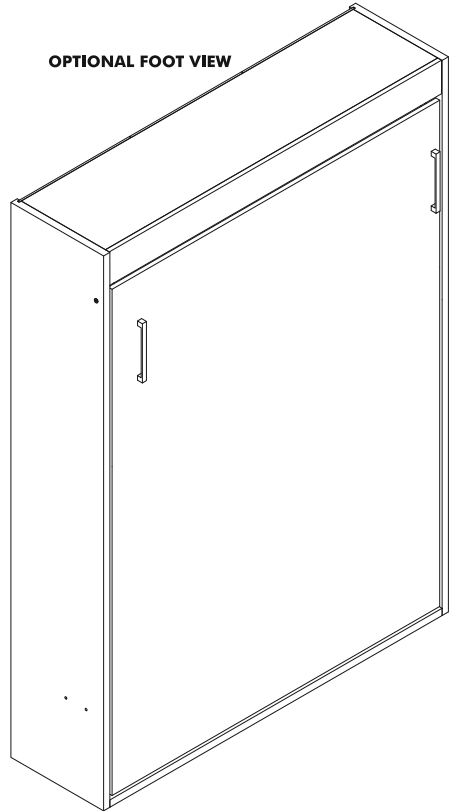

1. Unless an item is free standing, when mounting on a regular drywall, furniture must be fastened to wood or metal studs. Solid walls made of brick, concrete or similar materials are also acceptable. Do not mount furniture on to paper-mache or sheetrock like material without properly affixing it to stud.
2. For safety and longevity of the product you must periodically inspect the mounting and mechanical connections for integrity and tightness. Confirm that hardware remains properly affixed and connections are snug.
3. Unless noted otherwise on the product page, Wall Bed mattress thickness may not exceed 8 inch. Make sure to remove pillows and excess blankets before closing. This keeps mechanism free of obstructions and unnecessary stress.
4. Do not lean or rest heavy objects on sides or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.
5. Please use beds, desks and shelving as intended. Improper use may cause personal injury and damage to property.
6. With seasonal humidity change you must inspect interior and exterior of furniture.
7. Single, Twin, Twin XL beds accommodate the weight of one person, up to 250 lb. Exceeding recommended weight restrictions may lead to personal injury and property damage.
8. Before any un-mounting or disassembly please contact Multimo for technical support and instructions. Failure to properly detach wall bed may result in personal injury and property damage.
9. Some wall beds have legs that fully extend when open - be aware of where the leg is and will be.



WARNING

IMPORTANT! HAZARD WARNING!

All Wall Beds contain sophisticated and powerful lifting mechanism.
Failure to follow assembly and installation instructions may result in **severe personal injury and damage of the product.**

SECURE RIGIDLY TO A WALL!

Improper attaching wall bed to a wall will create a tip-over hazard and may result in severe personal injury or even death.
ONLY qualified installers should install or remove a wall bed.

10. For Bunk Beds:

- a. Always use provided ladder when accessing top bunk.
- b. Be slow, careful and aware of surroundings when opening top bunk.
- c. Do not horseplay. Beds are to be slept on only.



WARNING

To help prevent serious or fatal injuries due to entrapment or falls

- Never allow a child under 6 on upper bunk.
- Use only Twin/Twin XL size mattress on upper bunk.
- Ensure mattress thickness doesn't exceed 6", and that mattress surface at least 5" below upper edge of guard rails



WARRANTY

RETAIL RESIDENTIAL TERM

Lifetime guarantee on hardware.

5 year structural guarantee on cabinetry.

COMMERCIAL TERM

Lifetime guarantee on hardware.

2 year structural guarantee on cabinetry.



www.multimobeds.com