

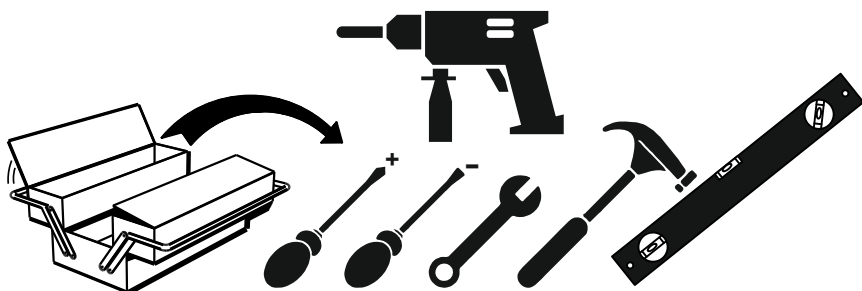
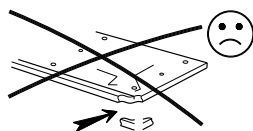
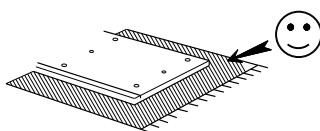
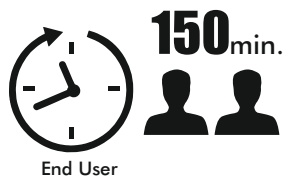


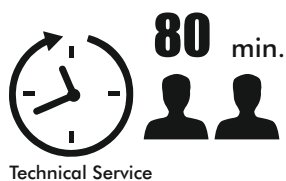

MULTIMO

A 753- SIMPLE FULL SIZE 140 CM

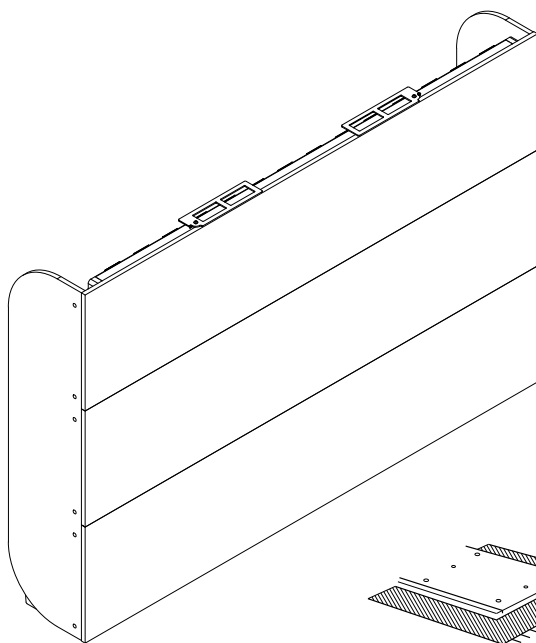

VIDEO
















<https://youtu.be/2e7lo8ujVl4>



Assembly Instructions

Track Title	Piece	(inch)			(mm)			
		Thickness	Length	Width	Piece	Thick	Height	Most
A	2	0,71	55,91	13,58	2	18	1420	345
B	1	0,71	84,17	18,66	1	18	2138	474
C	1	0,71	84,17	18,66	1	18	2138	474
D	1	0,71	84,17	18,66	1	18	2138	474
E-R / E-L	2		31,30		2		795	
F	2		75,98		2		1930	


Accessories List

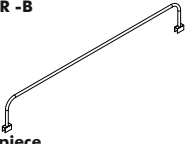MNX 02  12 / piece	MNG - 01  32 / piece	KVL 01  14 / piece	TAP - 01  32 / piece
SG - 01  4 / piece	MNX - 03  10 / piece	VTB - 02 (4,2x16) mm  60 / piece	TFC - 01(8x70) mm  18 / piece
SC-79  2 / piece	SC-78  4 / piece	AMR 03 (800 N)  2 / piece	DD - 01 (R10)  18 / piece
BAK - 01  2 / piece	PL - 04 (5x12x0,7) mm  4 / piece	YSB - 01 (3,9x16) mm  4 / piece	SC-98  2 / piece
KCE - 01  4 / piece	IM - 02 (6x20) mm  8 / piece	SC-110  18 / piece	KBY- 02  4 / piece
KOR -B  1 / piece	CTM - 01 (6x10) mm  4 / piece	SKT 01  4 / piece	CTM - 04 (8x25) mm  8 / piece

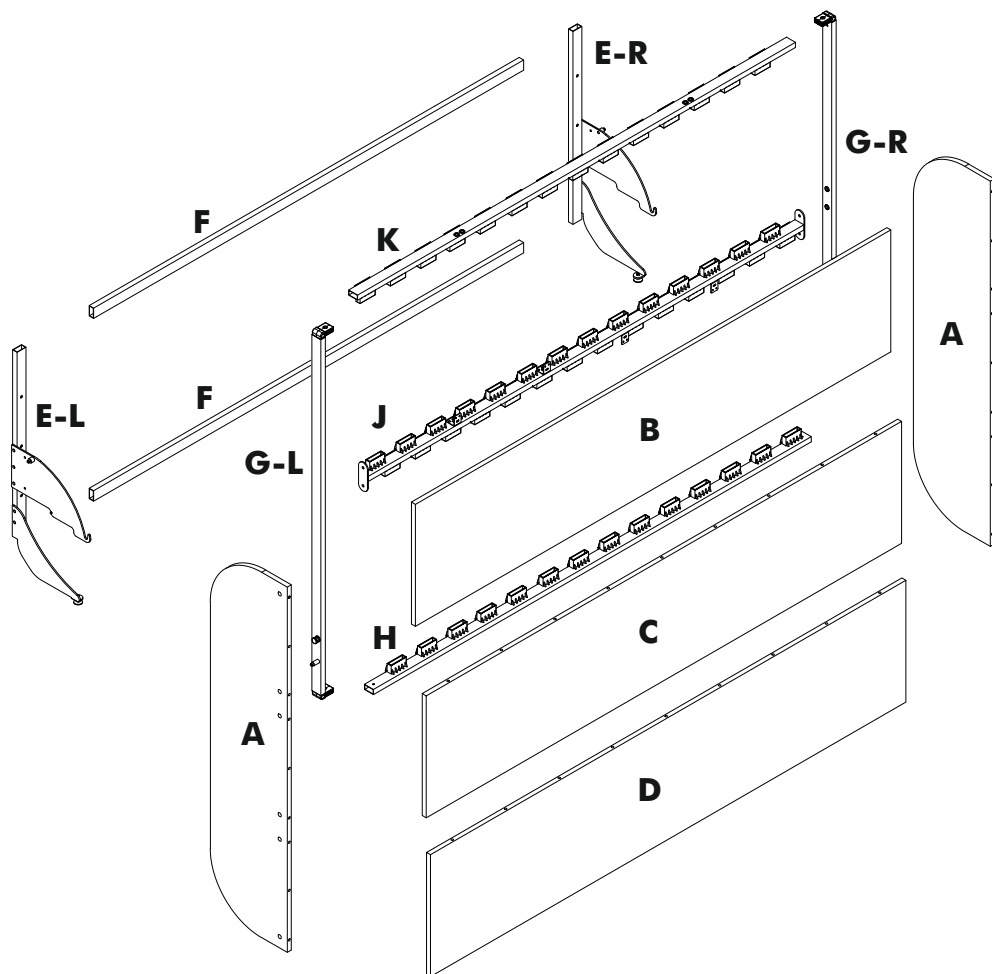

LTA - 01  28 / piece	AL - 01 (4MM)  1 / piece	AL - 02 (5MM)  1 / piece	SC-101  3 / piece
--	---	---	--

STEP 1

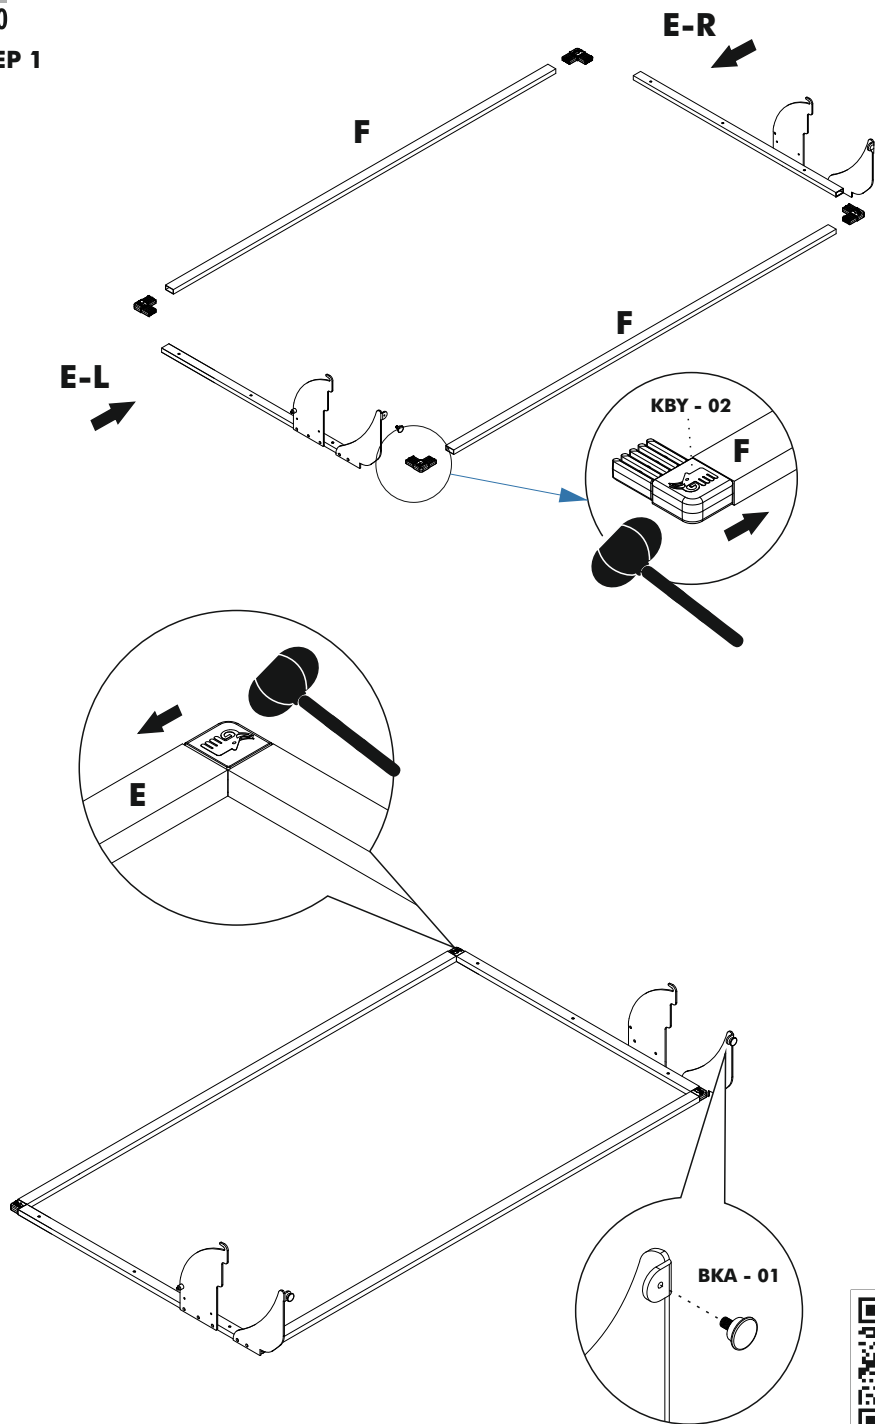



ATTENTION!!!


Must be secured to the wall made of brick, concrete or similarly strong material.

Mounting to wooden or metal studs is also acceptable.

Do not mount directly to sheetrock or paper-mache type walls not supported by studs.



STEP 2

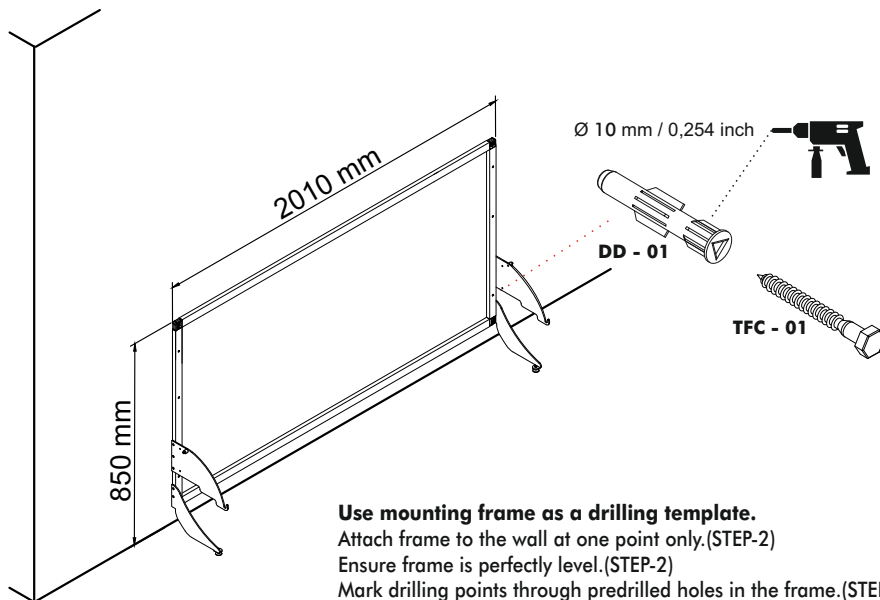

Use mounting frame as a drilling template.

Attach frame to the wall at one point only.(STEP-2)


Ensure frame is perfectly level.(STEP-2)

Mark drilling points through predrilled holes in the frame.(STEP-3)


Remove frame from the wall and drill pilot holes in the wall.(STEP-4)

Attach frame to the wall using supplied hardware.(STEP-5-6)


STEP 3

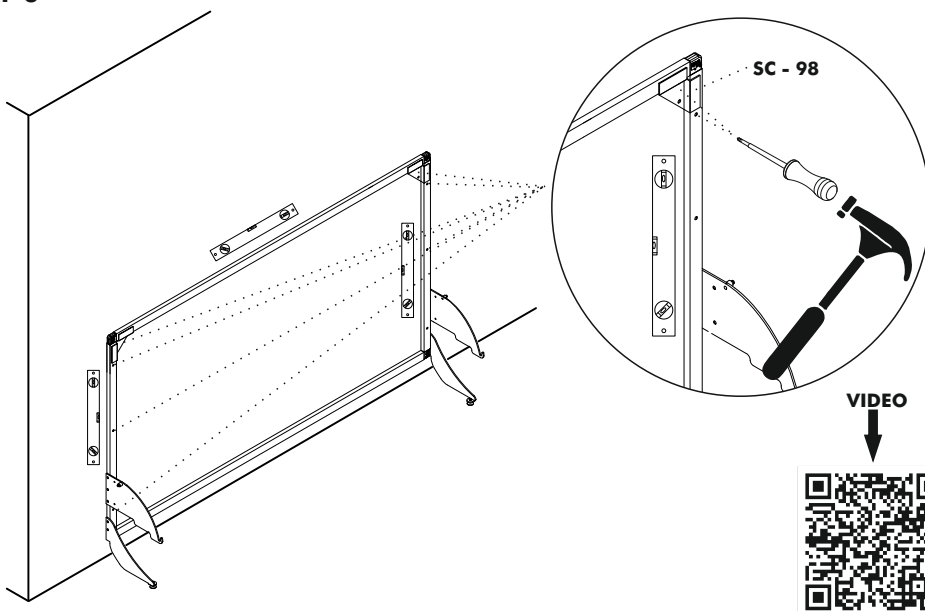

STEP 4

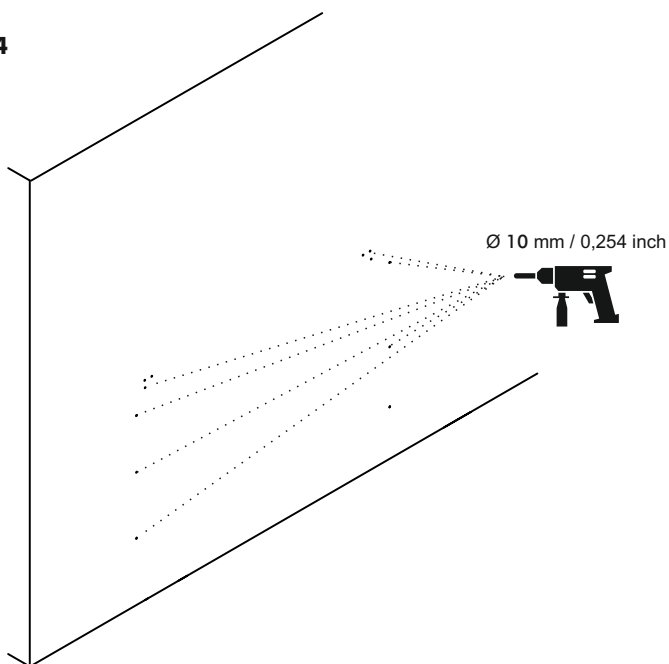

STEP 5

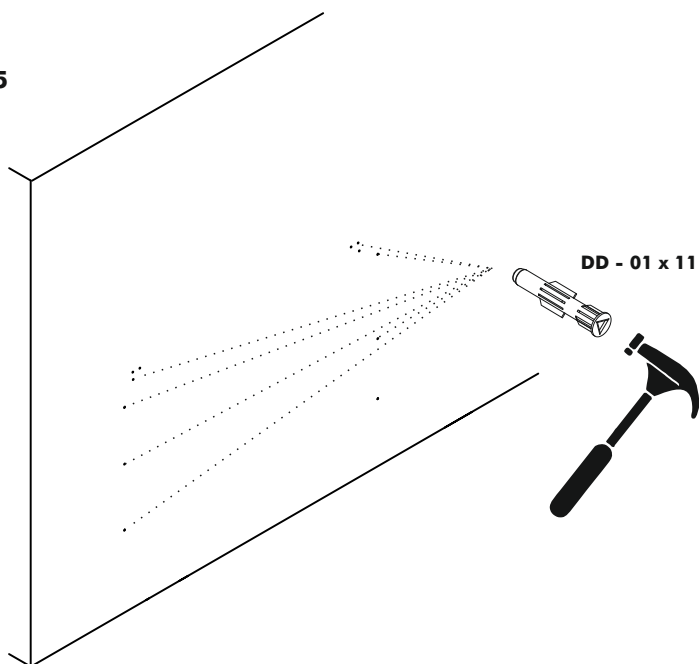

VIDEO



<https://youtu.be/bj-yHP8UHPE>

STEP 6

FIRST LOCATE THE STUDS BY USING "STUD FINDER" IN THE WALL AND DRILL IT



A-

SC - 98

TFC - 01 X 3



SC - 101 X 3

B-

A-

TFC - 01 X 6

SC - 101

DD - 01 X 2

TFC - 01 X 2

SUPPLY DRYWALL FASTENERS APPROPRIATE

TO YOUR WALL TYPE. WE RECOMMEND

USING STEEL TOGGLE BOLT ANCHOR THAT

SHOWN BELOW



VIDEO




https://youtu.be/in4Jh_RedDg


STEP 7




MNG - 01



KVL 01



MNX - 03

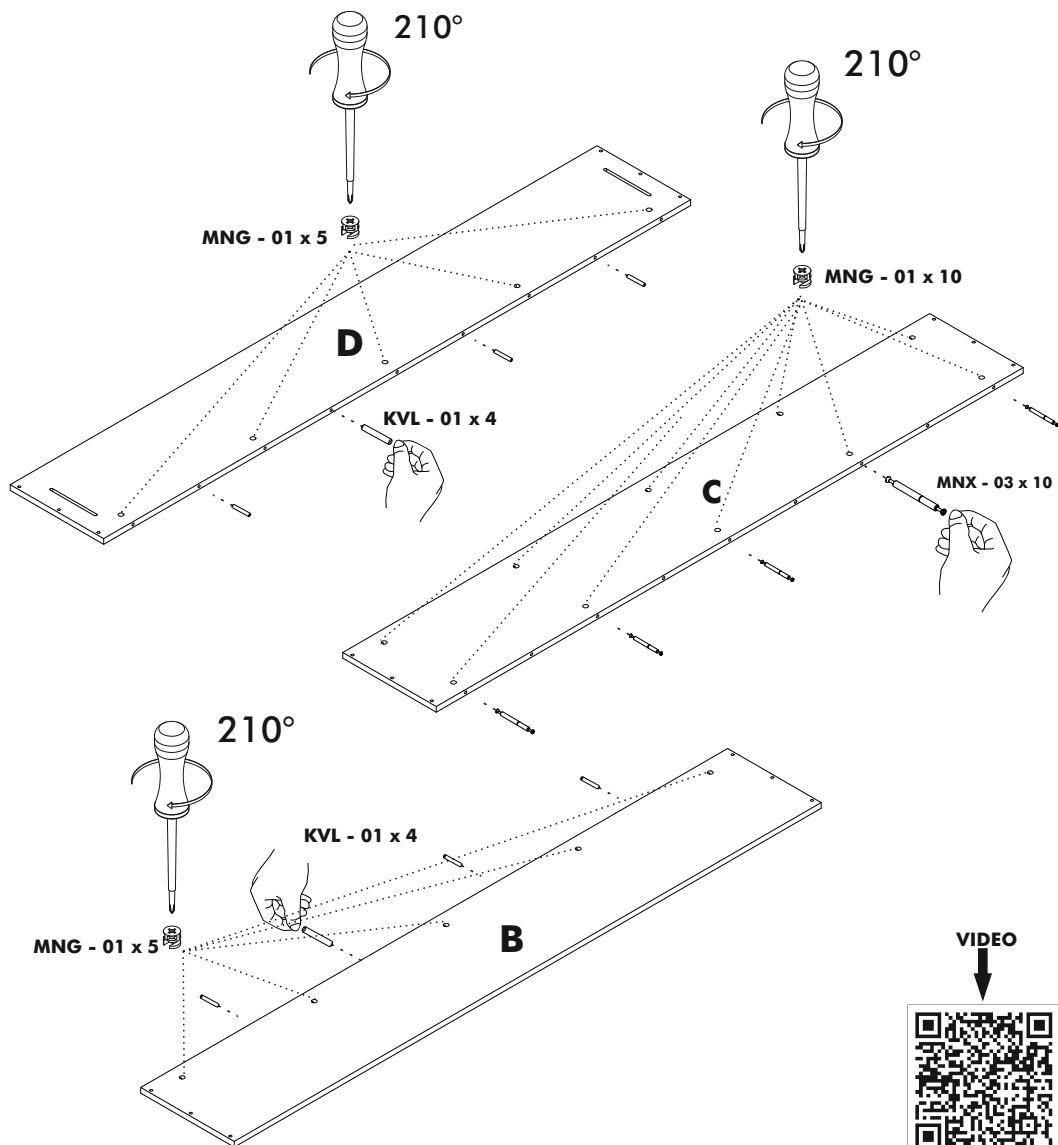


VIDEO



<https://youtu.be/ETElkqF1EnQ>


STEP 8

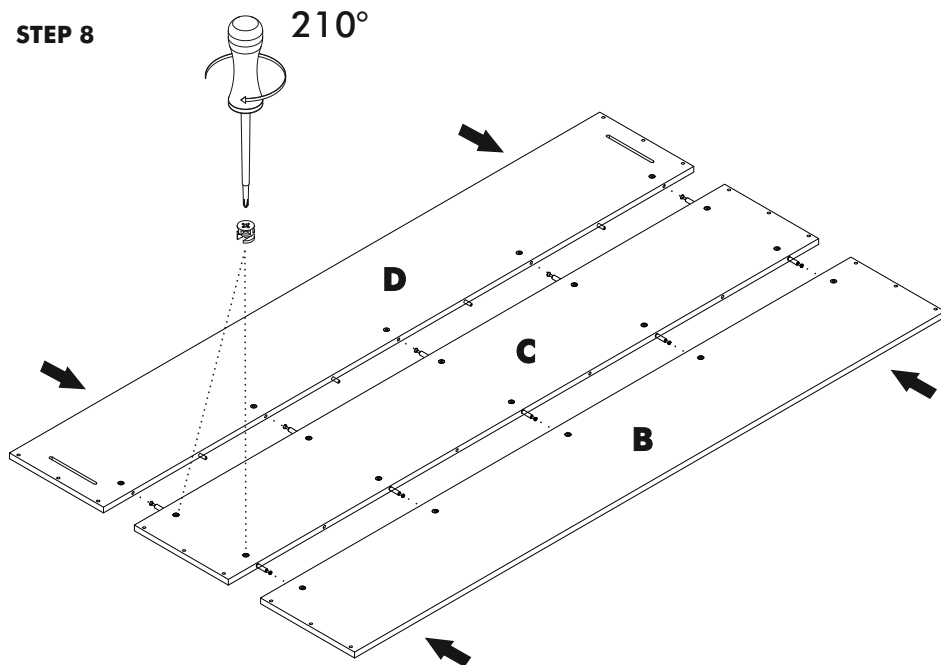

STEP 9




210°



MNG - 01 x 6



KVL - 01 x 3

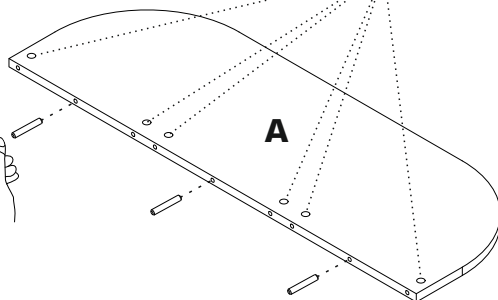



VIDEO



STEP 10

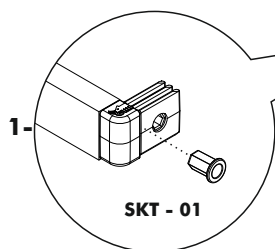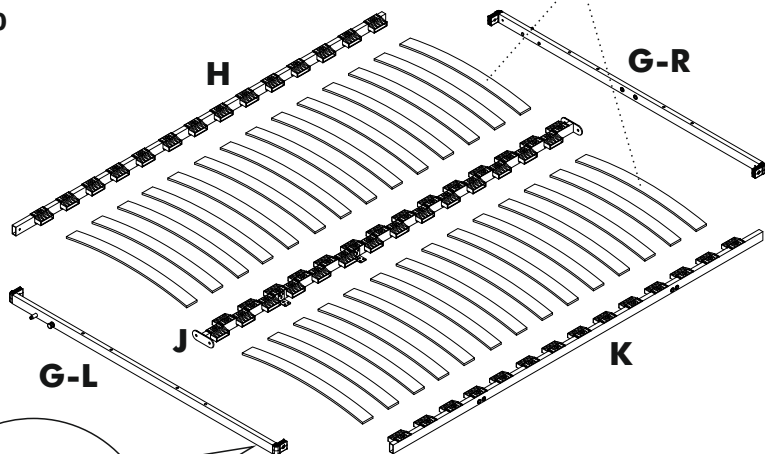

Install plastic corners and metal joints without gaps

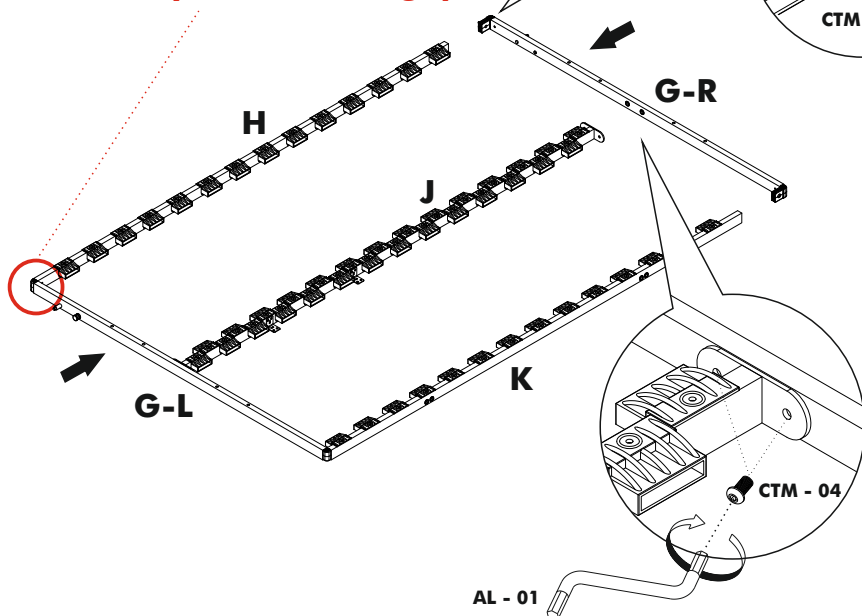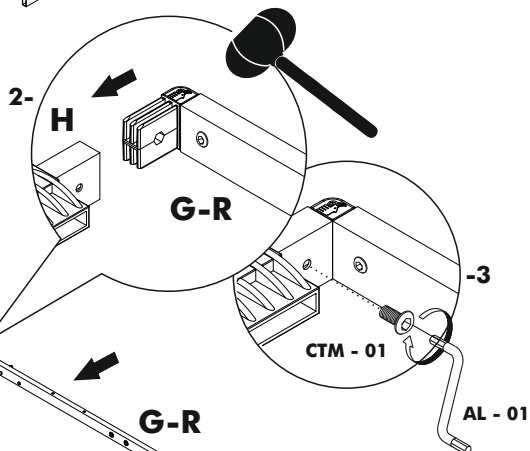



VIDEO



STEP 11


VTB - 02 x 20

Assemble the brackets over the places shown over H,K profiles

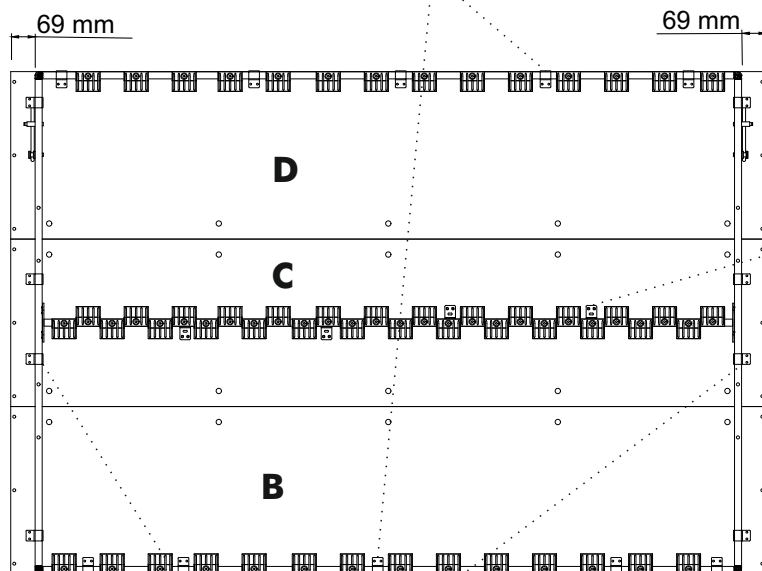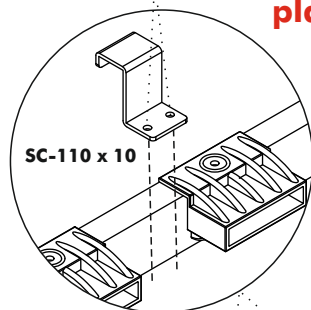

VTB - 02 x 16


Assemble the brackets over the places shown over G-L,G-R profiles

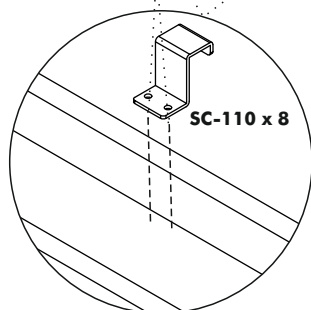

VIDEO




STEP 12

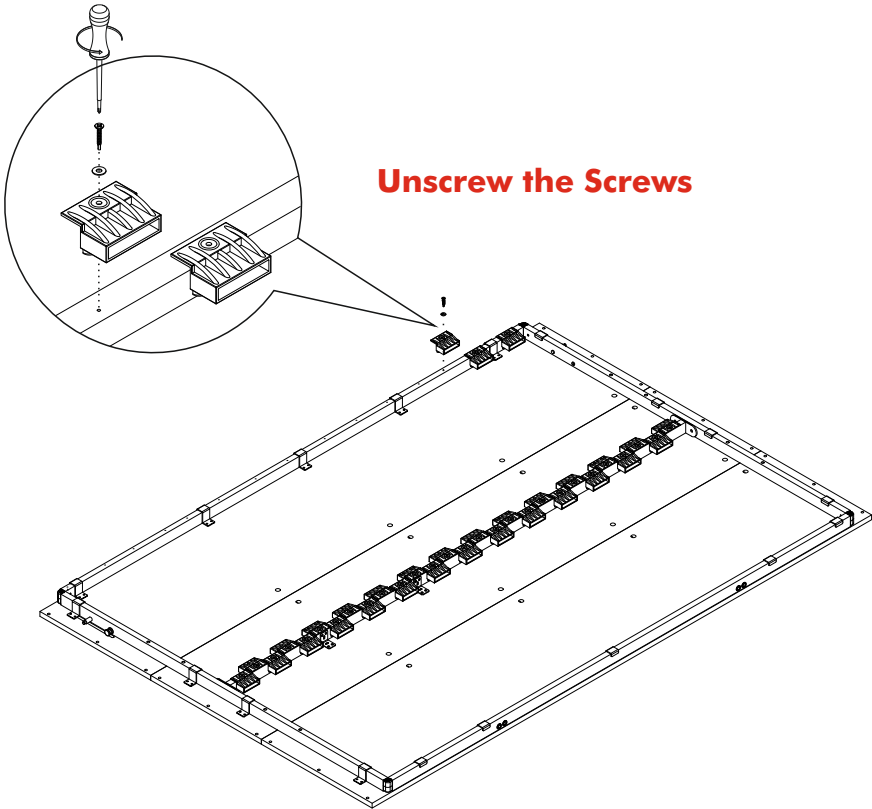

VIDEO



STEP 13



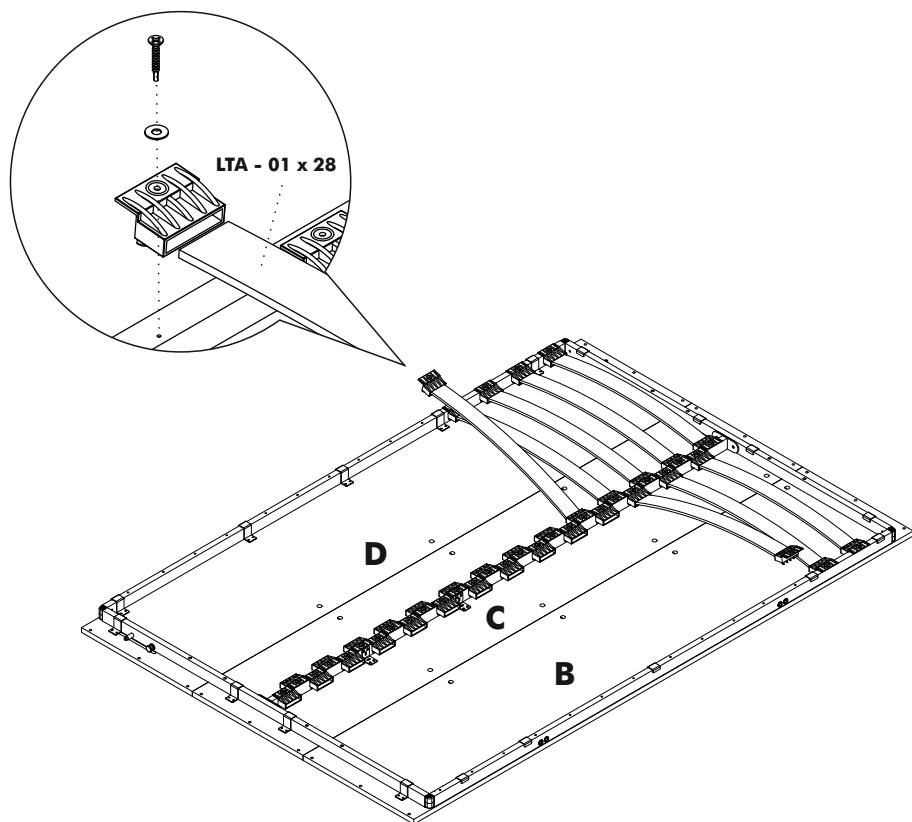


VIDEO




<https://youtu.be/Df4bjYZj25w>

STEP 14

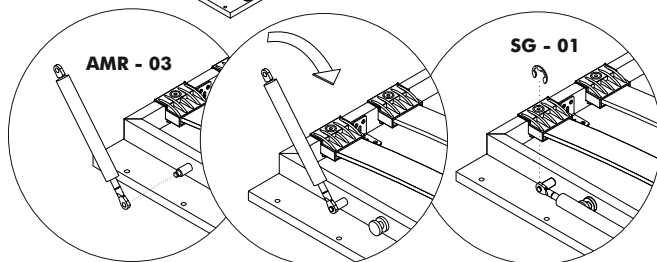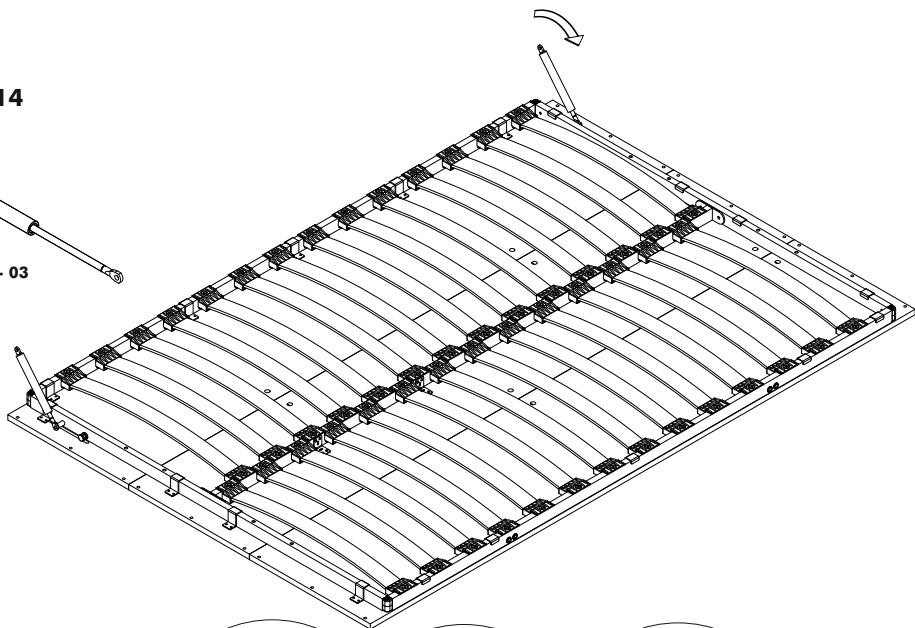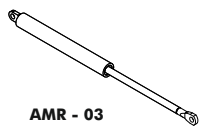

STEP 15

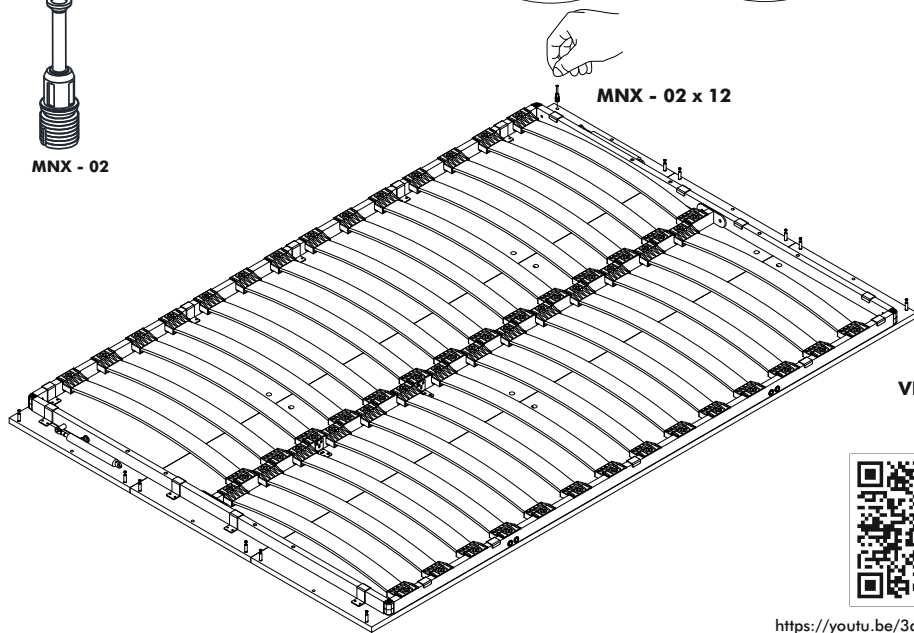


VIDEO




<https://youtu.be/3aDrq3O3jBw>

STEP 16

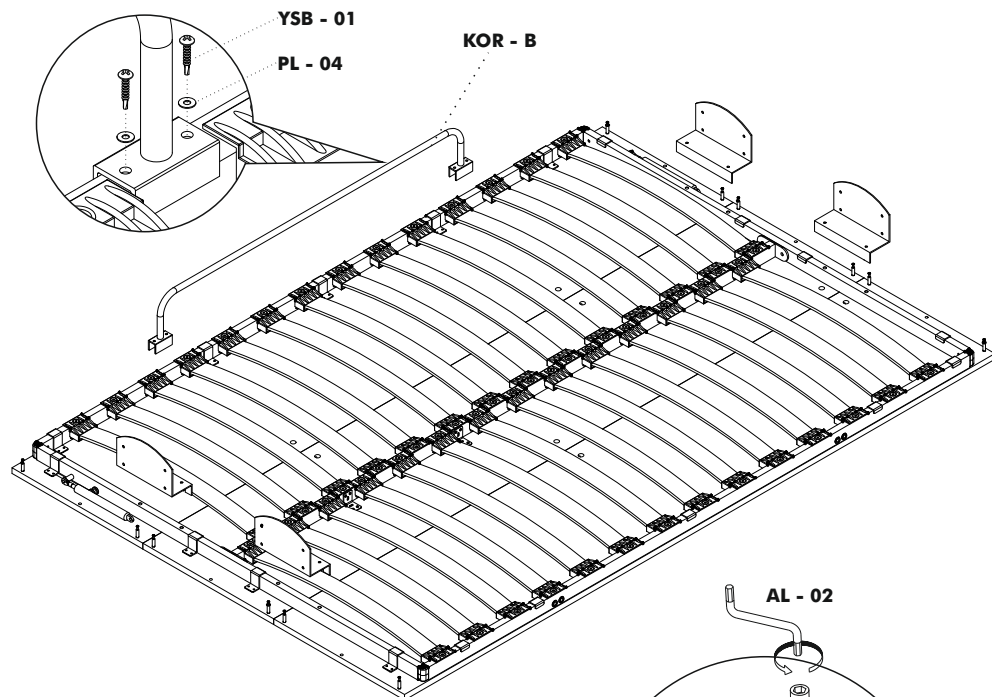


STEP 17

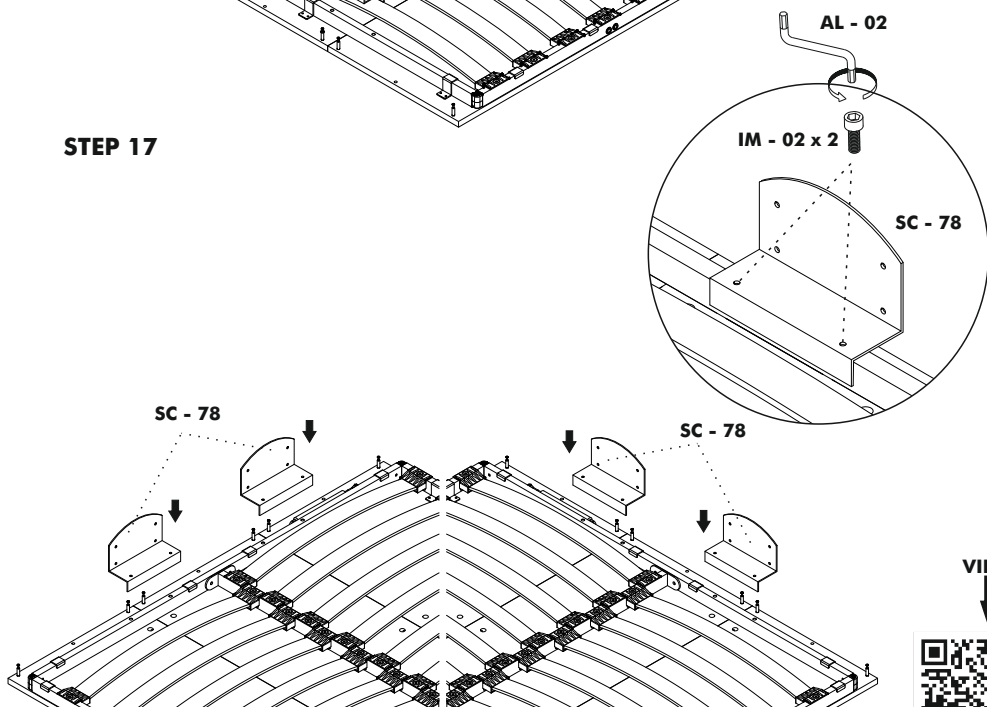

VIDEO



STEP 18






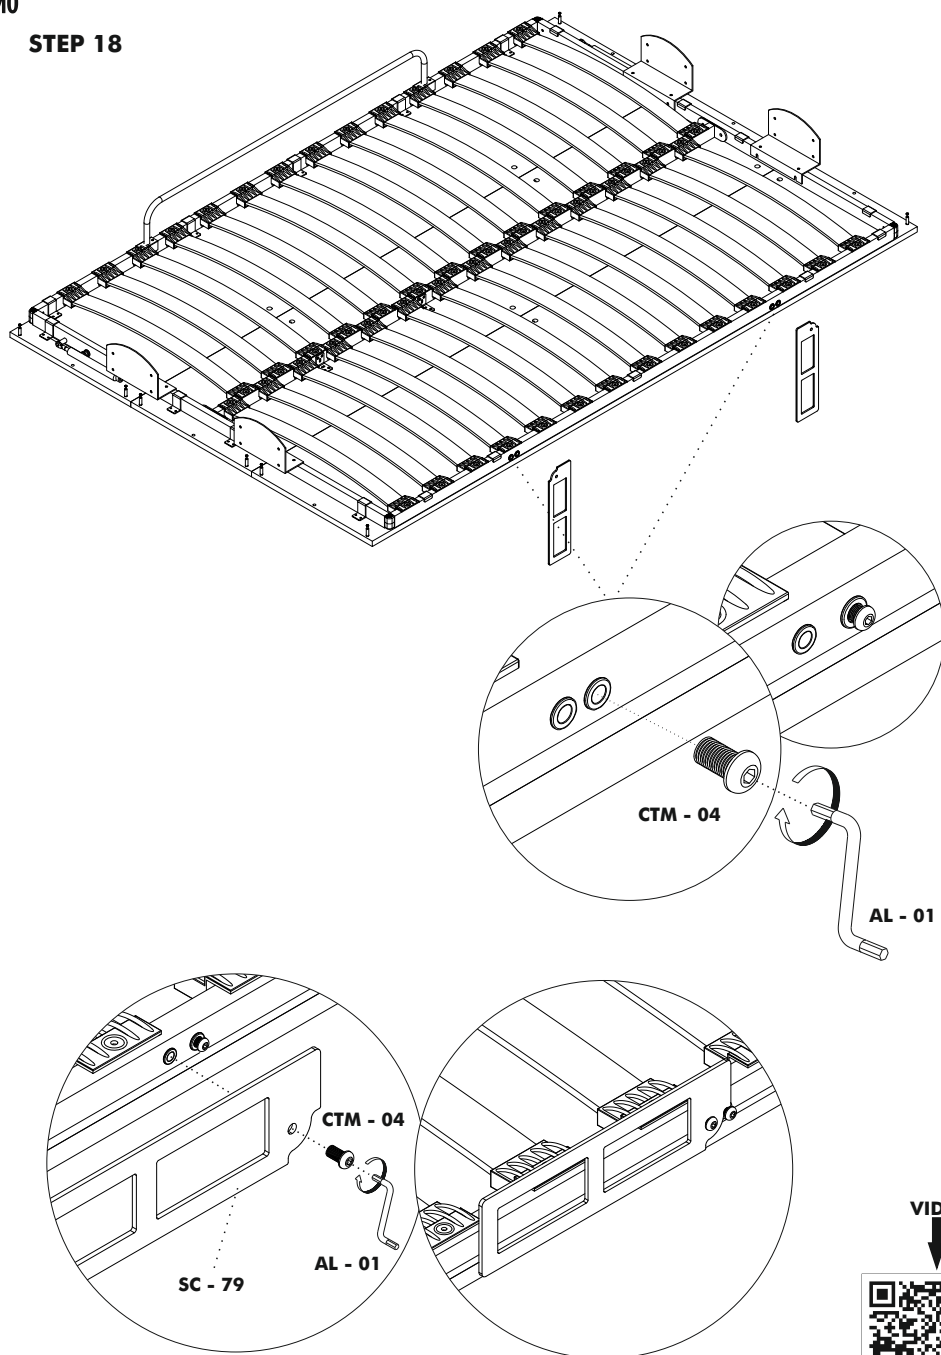


VIDEO



<https://youtu.be/4WpqBYGxu6c>

STEP 19

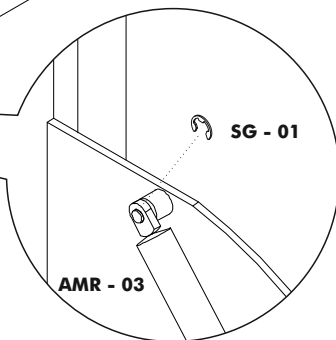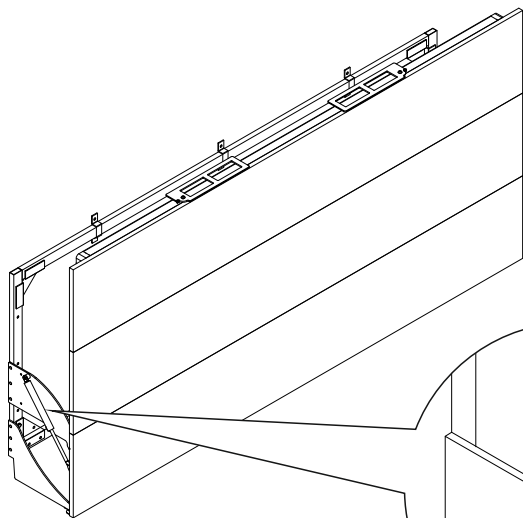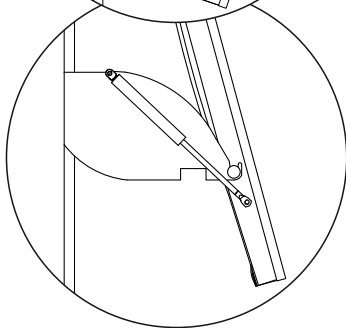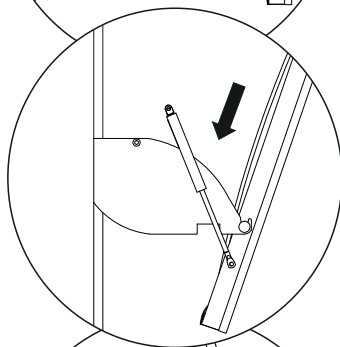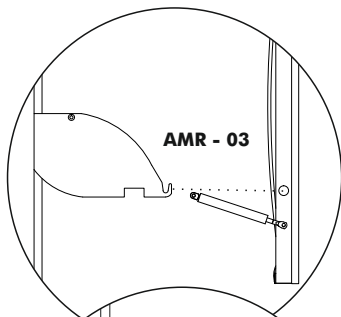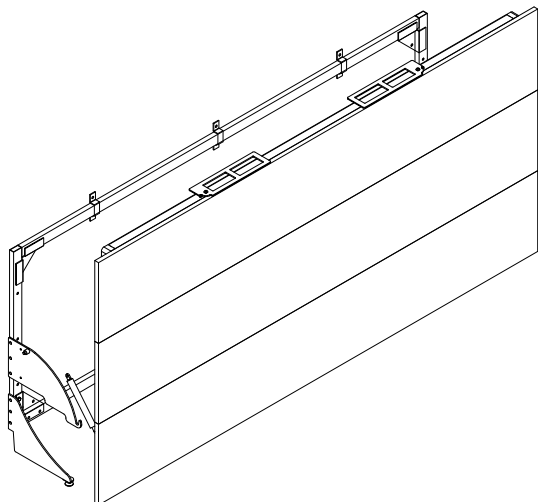


VIDEO



<https://youtu.be/yva5ZEshrrY>

STEP 20

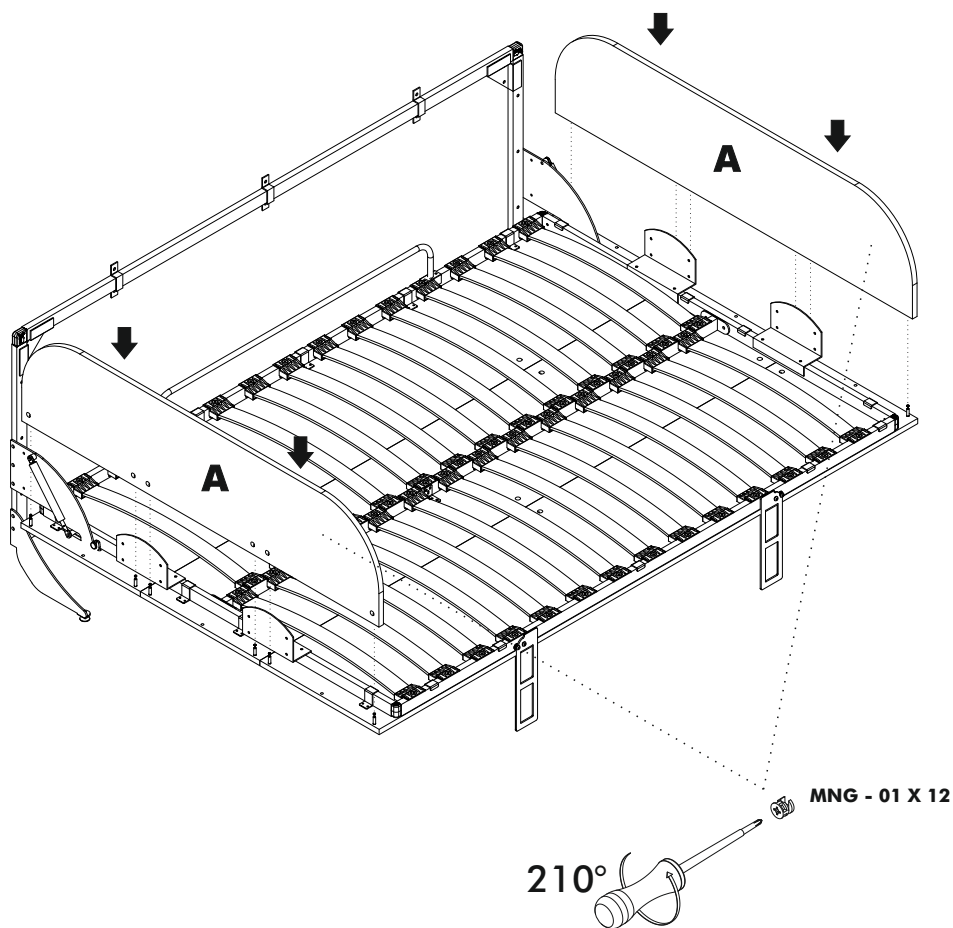


VIDEO



<https://youtu.be/aZIEdsR15tQ>


STEP 21

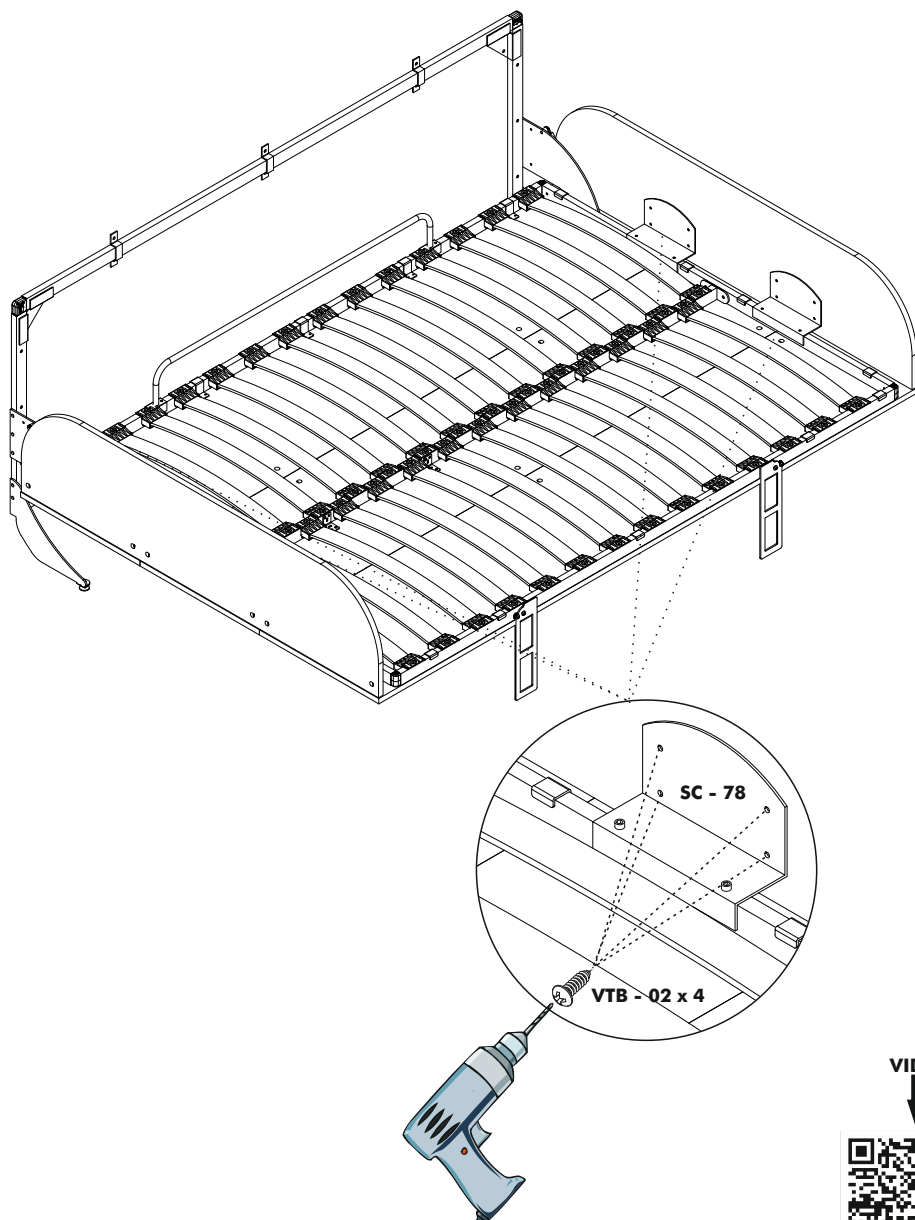

VIDEO




STEP 22

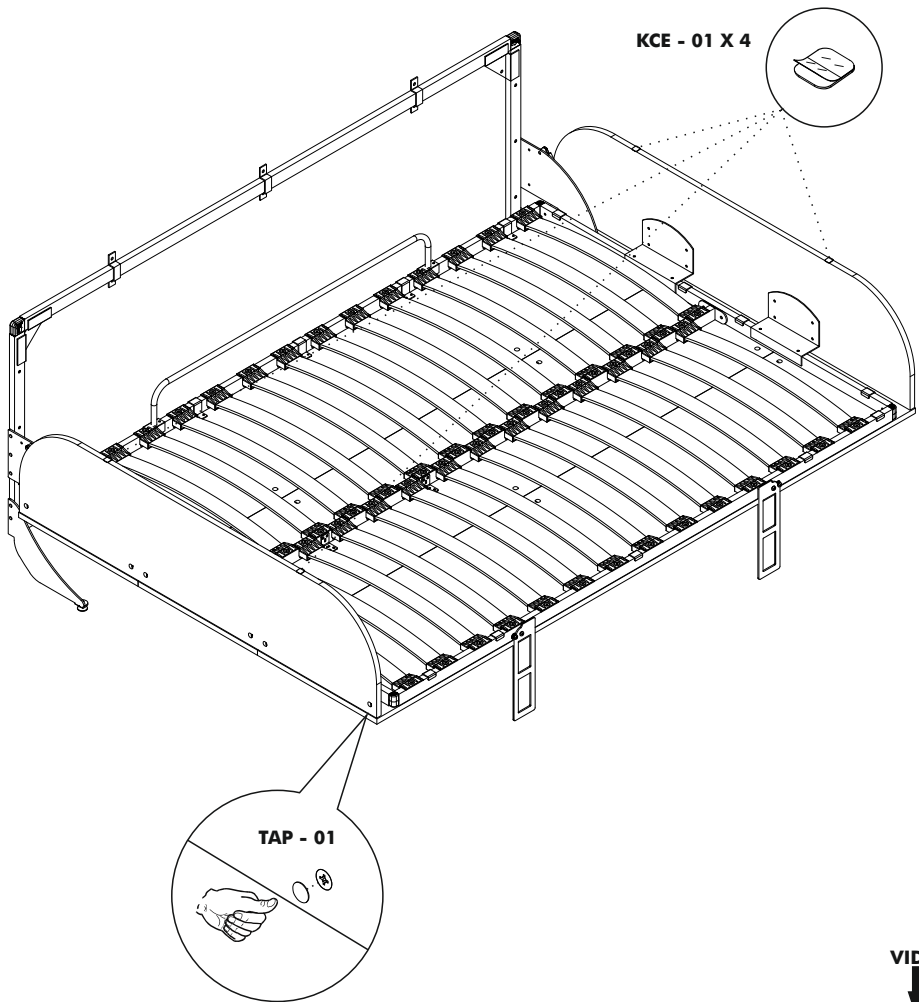

VIDEO



<https://youtu.be/ap20YLXkNsg>

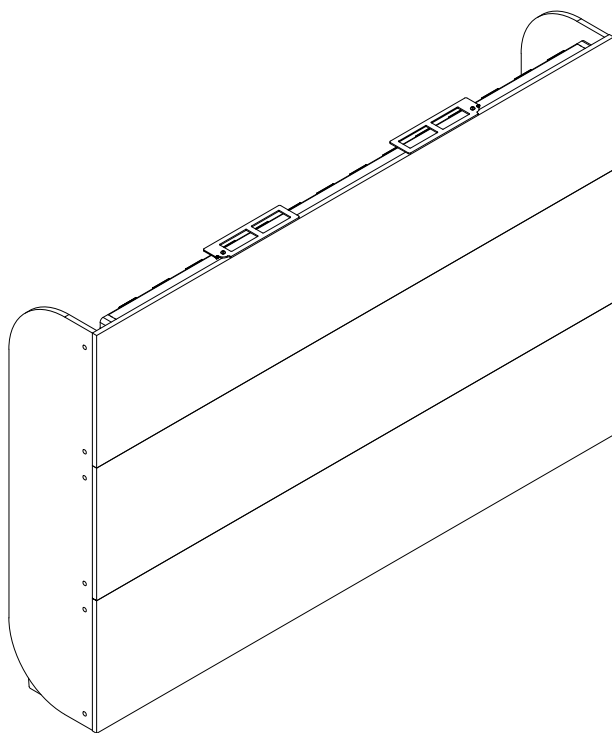

ATTENTION / HOW TO / READ ME / OWNER'S GUIDE

1. Unless an item is free standing, when mounting on a regular drywall, furniture must be fastened to wood or metal studs. Solid walls made of brick, concrete or similar materials are also acceptable. Do not mount furniture on to paper-mache or sheetrock like material without properly affixing it to stud.
2. For safety and longevity of the product you must periodically inspect the mounting and mechanical connections for integrity and tightness. Confirm that hardware remains properly affixed and connections are snug.
3. Unless noted otherwise on the product page, Wall Bed mattress thickness may not exceed 6,29 inch. Make sure to remove pillows and excess blankets before closing. This keeps mechanism free of obstructions and unnecessary stress.
4. Do not lean or rest heavy objects on sides or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.
5. Please use beds, desks and shelving as intended. Improper use may cause personal injury and damage to property.
6. With seasonal humidity change you must inspect interior and exterior of furniture.
7. Single, Twin, Twin XL beds accommodate the weight of one person, up to 250 lb. Exceeding recommended weight restrictions may lead to personal injury and property damage.
8. Before any un-mounting or disassembly please contact Multimo for technical support and instructions. Failure to properly detach wall bed may result in personal injury and property damage.
9. Some wall beds have legs that fully extend when open - be aware of where the leg is and will be.



WARNINGS

IMPORTANT! HAZARD WARNING!

All Wall Beds contain sophisticated and powerful lifting mechanism.
Failure to follow assembly and installation instructions may result in **severe personal injury and damage of the product.**

SECURE RIGIDLY TO A WALL!

Improper attaching wall bed to a wall will create a tip-over hazard and may result in severe personal injury or even death.

ONLY qualified installers should install or remove a wall bed.

10. For Bunk Beds:

- a. Always use provided ladder when accessing top bunk.
- b. Be slow, careful and aware of surroundings when opening top bunk.
- c. Do not horseplay. Beds are to be slept on only.



WARNINGS

To help prevent serious or fatal injuries due to entrapment or falls

- Never allow a child under 6 on upper bunk.
- Use only Twin/Twin XL size mattress on upper bunk.
- Ensure mattress thickness doesn't exceed 6", and that mattress surface at least 5" below upper edge of guard rails



WARRANTY

RETAIL RESIDENTIAL TERM

Lifetime guarantee on hardware.
5 year structural guarantee on cabinetry.

COMMERCIAL TERM

Lifetime guarantee on hardware.
2 year structural guarantee on cabinetry.



www.multimobeds.com